vtech®

User's manual

Models:
FS6325A
FS6325-2A

http://hkphones.vtech.com

TABLE OF CONTENTS

1. IMPORTANT SAFETY INSTRUCTIONS 1

2. SET UP THE TELEPHONE 3

2.1 Package Contents 3
2.2 Location 3
2.3 Connect the Base Station 4
2.4 Connect the Charger Base (for FS6325-2A only) 5
2.5 Install and Charge the Handset Batteries 6

3. GET TO KNOW YOUR PHONE.....7

3.1 Overview of the Handset 7
3.2 Overview of the Base Station 10
3.3 Base Station LED Display Behaviour 12
3.4 Handset LCD Display Icons.....14
3.5 Menu Structure 16
3.6 Text and Digit Entry Table 18
3.6.1 English Character Set 18

4. BLUETOOTH® 20

4.1 Introducing BLUETOOTH® 20
4.2 Important Information 20
4.3 Bluetooth Setup 22
4.3.1 Add a Mobile Phone 22
4.3.2 Add a Headset 23
4.3.3 Auto Connection 25
4.3.4 Device Lists and Connection 25
4.3.5 Review the Active Device List 26
4.3.6 Connect/Disconnect a Device 26
4.3.7 Remove an Active Device 26
4.3.8 Add an Active Device 27
4.3.9 Review the Paired Device List 27
4.3.10 Rename a Paired Device 28
4.3.11 Remove a Paired Device.....28
4.3.12 Replace an Active Device 29
4.3.13 Change PIN 29

5. USING THE PHONE 30

5.1 Make a Home Call 30
5.1.1 Preparatory Dialling a Home Call 30
5.1.2 Direct Dialling a Home Call 30
5.1.3 Call from the Contacts 30
5.1.4 Call from the Call Log 30
5.1.5 Call from the Redial List 30
5.2 Answer a Home Call 31
5.3 End a Home Call 31
5.4 Call Waiting on the Home Line 31
5.5 Make a Mobile Call 32
5.5.1 Preparatory Dialling a Mobile Call 32
5.5.2 Direct Dialling a Mobile Call 32
5.6 Answer a Mobile Call 32
5.7 End a Mobile Call 32
5.8 Call Waiting on the Mobile Line 33
5.9 Answer an Incoming Mobile Call While on a Home Call 33
5.9.1 Answer the Incoming Mobile Call 33
5.9.2 End the Mobile Call 33
5.9.3 Resume the Home Call on Hold 33
5.10 Answer a Home Call While On a Mobile Call 34
5.10.1 Answer the Incoming Home Call 34
5.10.2 End the Home Call 34
5.10.3 Resume the Mobile Call on Hold 34
5.11 Conference Calls 34
5.11.1 Make a Conference Call between Home Call and Mobile Call 34
5.11.2 End a Conference Call 34
5.11.3 Using the Home and Mobile Lines Together 35
5.12 Handsfree 35
5.13 Earpiece / Handsfree Volume 35
5.14 Silencing the Ringer 35
5.15 Auto Answer 36
5.16 Lock Keypad 36
5.17 Call Timer 36
5.18 Out of Range Warning 36

5.19 Mute....37
5.20 Hold....37
5.21 Chain Dialling....37
5.21.1 Access a Number in the Contact List While on a Call....37
5.21.2 Access a Number in the Call Log While on a Call....38
5.22 Redial....38
5.22.1 Review the Redial List....38
5.22.2 Dial a Redial Entry....39
5.22.3 Save a Redial Entry to the Contact List....39
5.22.4 Delete a Redial Entry....39
5.22.5 Delete all Redial Entries....40
5.23 Call Recording....40
5.24 Find Handset (Paging)....41
5.25 Power On/Off Handset....41
5.26 Turn On/Off LCD Backlight....41

6. CONTACTS....42

6.1 Create and Review Entries....42
6.1.1 Create a New Entry....42
6.2 Add a Predialled Telephone Number to the Contact List....43
6.3 View the Contacts....44
6.4 Alphabetical Search....44
6.5 Dial, Edit or Delete a Contact Entry....44
6.5.1 Dial a Contact Entry....44
6.5.2 Edit a Contact Entry....45
6.5.3 Delete a Contact Entry....45
6.5.4 Delete All Contact Entries....45
6.6 View Capacity....45
6.7 Edit Call Group....46
6.7.1 Rename the Call Group....46
6.7.2 Set the Ringtone of the Call Group....46
6.8 Speed Dial....47
6.8.1 Assign a Speed Dial Contact Entry....47
6.8.2 View the Speed Dial List....47

6.8.3 Dial a Speed Dial Entry 47
6.8.4 Reassign a Speed Dial Entry 48
6.8.5 Delete a Speed Dial Entry 48

7. CALL LOG 49

7.1 Calling Number Display 49
7.1.1 View the Call Log 50
7.1.2 Dial a Call Log Entry 50
7.1.3 Save a Call Log Entry to the Contact List 50
7.1.4 Delete a Single Entry in the Call Log 51
7.1.5 Delete the Entire Call Log 51
7.2 Call Log Settings 51
7.2.1 Set the Call Log Type 51
7.2.2 Set the New Call Alert 52
7.3 Voicemail Indicator 53

8. MEDIA 54

8.1 View Caller Pictures 54
8.2 View Slideshow of Wallpapers 54

9. NEW EVENTS 55

9.1 View New Events 55

10. PHONE SETTINGS 56

10.1 Alarm Settings 56
10.1.1 Turn On or Off the Alarm 56
10.1.2 Set the Alarm Time 56
10.1.3 Set the Alarm Name 56
10.1.4 Set the Alarm Melody 57
10.1.5 Set the Alarm Repetition 57
10.2 Date and Time Settings 58
10.2.1 Set the Clock Format 58
10.2.2 Set the Date and Time 58
10.2.3 Set the Time/Date Master 59
10.3 Handset Display Settings 59
10.3.1 Set the Screensaver 59
10.3.2 Set the Brightness Level 60

10.3.3 Set the LCD Backlight....60
10.4 Handset Audio Settings....60
10.4.1 Set the Ringer Tones....60
10.4.2 Set the Ringer Volume....61
10.4.3 Set the Silent Mode....61
10.4.4 Set the Voice Ringer....62
10.4.5 Set the Advisory Tones....63
10.4.6 Set the Wideband Sound....63
10.4.7 Set the Vibrating Alert....64
10.5 Set the Direct Call....64
10.6 Select the Base....65
10.7 Set the Auto Answer Mode....65
10.8 Set the Room Monitor....66
10.8.1 Activate the Room Monitor....67
10.8.2 Deactivate the Room Monitor....67
10.9 Reset the Handset....68
10.10 Base Settings....68
10.10.1 Ringer Settings....68
10.10.2 Set the Flash Time....69
10.10.3 Set the Dial Mode....69
10.10.4 Manage the Handsets....70
10.10.5 Change the System PIN....71
10.10.6 Reset the Base....71
10.10.7 Set the Manual ECO Mode....72
10.10.8 Set the Enhanced ECO Mode....72
10.10.9 Set the Handset Ringer Priority....73
10.10.10 Set the Call Share....73
10.10.11 Set the Exchange Code....73
10.11 Register a Handset to a Base....74

11. ANSWERING MACHINE....75

11.1 Message Playback....75
11.2 Delete All Old Messages....76
11.3 Answer On/Off....77
11.4 Record and Play Memos....78
11.5 CareMemo....78
11.5.1 Play a CareMemo....78

11.5.2 Record a CareMemo 79
11.5.3 Turn the CareMemo ON/OFF 79
11.6 Outgoing Message 80
11.6.1 Play Outgoing Message 80
11.6.2 Record Your Own Outgoing Message 80
11.6.3 Delete your Outgoing Message 81
11.7 TAM Settings.....81
11.7.1 Set the Answer Mode 81
11.7.2 Set the Answer Delay.....82
11.7.3 Set the Recording Time.....82
11.7.4 Enable/Disable Call Screening.....82
11.8 Call Screening 82
11.9 Remote Access.....84
11.9.1 Enable/Disable Remote Access 84
11.9.2 Operate Your Answering Machine Remotely.....84
11.9.3 Activate Remote Access if TAM is Off 85
11.10 Answering System and Voicemail.....85
11.10.1 Using the Answering System and Voicemail Together 86
11.10.2 Voice Prompts 86

12. ADDITIONAL HANDSETS.....87

12.1 Transfer a Call 87
12.2 Intercom.....87
12.2.1 Initiate an Intercom Call 87
12.2.2 Answer an Intercom Call at the Destination Device 87
12.2.3 Silence an Intercom Call 87
12.2.4 Mute while on an Intercom Call.....88
12.2.5 End an Intercom Call 88
12.3 Answer an Incoming Call during an Intercom Call.....88
12.3.1 Answer a Home Call during an Intercom Call.....88
12.3.2 Answer a Mobile Call during an Intercom Call.....89

12.4 Conference Call....89
12.4.1 Make a 3-Way Conference Call....89
12.4.2 Make a 3-Way Conference Call with Call Share....90
12.4.3 Make a Conference Call between Two Ext. Lines and One Handset....90
12.5 Register Handsets....90
12.5.1 Automatic Registration for Handset....90
12.5.2 Register a Handset through the Menu....91
12.6 Deregister Handsets....92

13. TROUBLESHOOTING....93

14. TECHNICAL SPECIFICATIONS....96

15. CARE AND MAINTENANCE INSTRUCTIONS...97

1. IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all the instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
5. Do not expose the telephone to direct sunlight or extreme cold environment. Do not put the telephone close to heating sources such as radiators, cookers, etc.
6. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
7. Unplug this product from the wall outlet and refer servicing to VTech under the following conditions:
    - When the power supply cord or plug is damaged or frayed.
    - If the product does not operate normally by following the operating instructions.
    - If the product has been dropped and the cabinet has been damaged.
    - If the product exhibits a distinct change in performance.
8. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
9. Do not use the telephone to report a gas leak in the vicinity of the leak.
10. Use only the supplied Li-ion batteries! The operation periods for the handsets are only applicable with the default battery capacities.

11. The use of other battery types or non-rechargeable batteries/ primary cells can be dangerous. These may cause interference and/or unit damages. The manufacturer will not be held liable for damage arising from such non-compliance.
12. Do not use third party charging bays. The batteries may be damaged.
13. Please note the correct polarity while inserting the batteries.
14. Do not immerse batteries in water, do not place in fire.

DISPOSAL WARNING

1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products/battery should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance/battery will help prevent potential negative consequences for the environment and human health.

For more detailed information about disposal of your old appliance/ battery, please contact your city office, waste disposal service or The Shop where you purchased the product.

If you have questions about this product, or having difficulty with setup or operation, call or Customer Service Centre.

Customer Service Hotline: (852) 2666 5558

Technical Inquiry Hotline: (852) 2667 7433

2. SET UP THE TELEPHONE

2.1 Package Contents

The package contains the following items:

- 1 Handset (1 for FS6325A, 2 for FS6325-2A)
- 1 Base unit
- 1 AC power adapter
- Charger (1 for FS6325-2A)
- 1 Telephone line cord
- 1 Li-ion rechargeable battery pack (1 for FS6325A, 2 for FS6325-2A)
- 1 English user's manual
- 1 Traditional Chinese user's manual
- 1 Warranty card

2.2 Location

For maximum coverage and reduce the interference, here are some guidelines you should consider when you place the base unit:

- Place your telephone within 2 metres of the mains power socket and telephone socket so that the cables will reach.
- Make sure it is at least 1 metre away from other electrical appliances to avoid interference. Your telephone works by sending radio signals between the handset and base. The strength of the signal depends on where you locate the base. Putting it as high as possible ensures the best signal.
- The maximum range between the base station and the handset is approximately 300 metres.

If the reception for a base unit location is not satisfactory, move it to another location for better reception.

Depending on the surrounding conditions as well as spatial and structural factors, the range may be reduced. The range indoors is normally less than outdoors.

2.3 Connect the Base Station

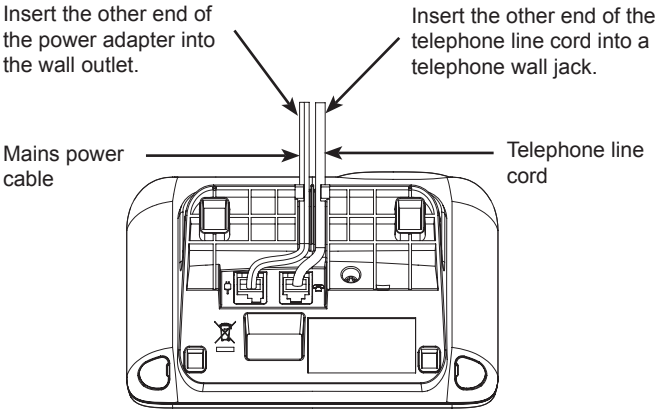
Insert the other end of the power adapter into the wall outlet.
Insert the other end of the telephone line cord into a telephone wall jack.
Mains power cable
Telephone line cord

1. Insert the DC plug of the power adapter and the telephone line cord into the base station, as shown above.
2. Insert the other end of the power adapter into the wall outlet and the telephone line cord into a telephone wall jack. If you have DSL high speed internet service, a DSL filter (not included) is required.

NOTES

1. Always use the cables supplied with the product.
2. Use only the power adapter supplied with the base station.

2.4 Connect the Charger Base (for FS6325-2A only)

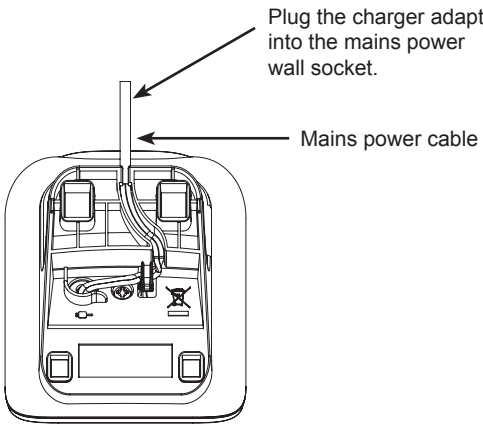

Plug the charger adapter into the mains power wall socket and switch the power on.

NOTE

Ensure power cord is fed through slot on the charger so unit sits flush with the desk.

2.5 Install and Charge the Handset Batteries

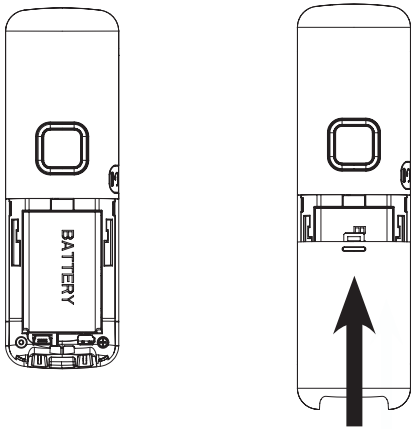

1. Slide open the battery compartment cover.
2. Place the supplied rechargeable battery in the battery compartment, with the battery connector plugged in, as shown.
3. Slide the battery compartment cover back on until it clicks into place.
4. Place the handset on the base to charge for at least 10 hours. A beep indicates that the handset is properly placed on the base or charger.

NOTES

1. Use only the supplied Li-ion rechargeable batteries.
2. If you do not use the handset for a long time, disconnect and remove the batteries to prevent possible leakage.

3. GET TO KNOW YOUR PHONE

3.1 Overview of the Handset

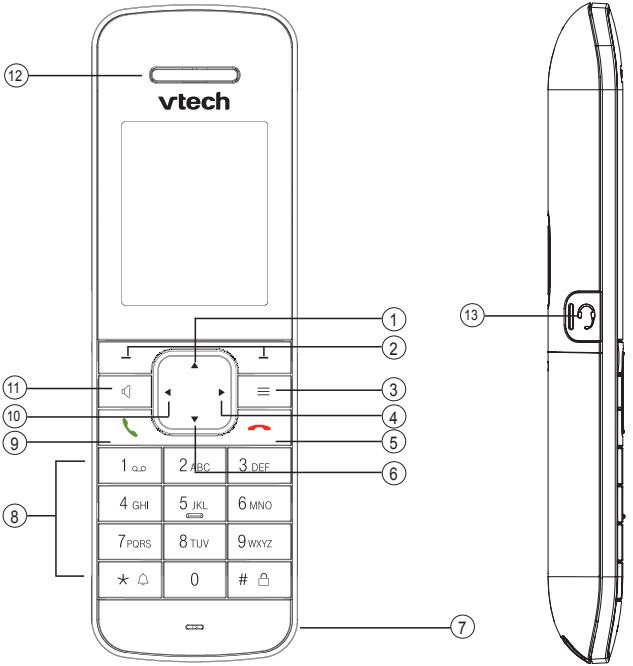

1. ▲ UP KEY

In menu mode: Press to scroll up the menu items.

In contact list / redial list / call log: Press to scroll up the list.

During a call or TAM message playback: Press to increase the listening volume.

While predialling or editing: Press to move the cursor one line upwards or to the beginning of the strings.

2. — SOFT KEYS

Press to select a menu item above the key..

While in a menu, press to select an item, or save an entry or setting.

3. ≡ NEW EVENT KEY

In main menu: Press to show the event summary if there are multiple types of new events, or access the event directly if there is only one type of new events. If there are no new events, the screen displays **No New Events** and returns to main menu.

4. ► RIGHT KEY

In main menu: Press to move to the next main menu item horizontally.

In sub menu / redial list / call log: Press to access the next menu level.

While predialling or editing: Press to move the cursor one character right.

5. TALK OFF

In main menu: Press and hold to power on/off the handset.

When the handset is off cradle: Press once to dim the LCD backlight and press again to turn off the LCD backlight in cyclic (i.e. Dim > Off > On).

In menu / editing mode: Press to return to idle mode.

During a call: Press to hang up and return to idle mode.

6. ▼ DOWN KEY

In menu mode: Press to scroll down the menu items.

In contact list / redial list / call log: Press to scroll down the list.

During a call or TAM message playback: Press to decrease the listening volume.

While predialling or editing: Press to move the cursor one line downwards or to the end of the strings.

7. MICROPHONE

8. ALPHANUMERIC KEYPAD

Press to insert a digit / character / * / #.

Number keys in main menu: Press and hold to perform speed dial.

in main menu: Press and hold to dial the voicemail number.

* in editing mode: Press to toggle between uppercase or lowercase character input.

in main menu: Press and hold to turn off / on the handset ringer.

in main mode: Press and hold to lock / unlock the keypad.

0 in idle / predialling / number editing mode: Press and hold to insert a pause.

9. TALK ON/FLASH

In contact list / predial mode / redial list / call log: Press to make a call to the selected entry.

In main menu: Press and hold to access the redial list.

During ringing: Press to answer a call.

In predial mode: Press and hold to insert a flash.

10. ◄ LEFT KEY

In main menu: Press to move to the previous main menu item horizontally.

In sub menu / redial list / call log: Press to access the previous menu level.

During a call: Press to mute/unmute the call.

While predialling or editing: Press to move the cursor one character left.

11. SPEAKERPHONE

In main menu: Press and hold to access the redial list.

In contact list / redial list / call log: Press to make a call to the selected entry
with speakerphone.

During ringing: Press to answer a call with speakerphone.

In main menu: Press to turn on the handset speakerphone and press again to resume normal handset use.

12. EARPIECE

13. HEADSET CONNECTOR

3.2 Overview of the Base Station

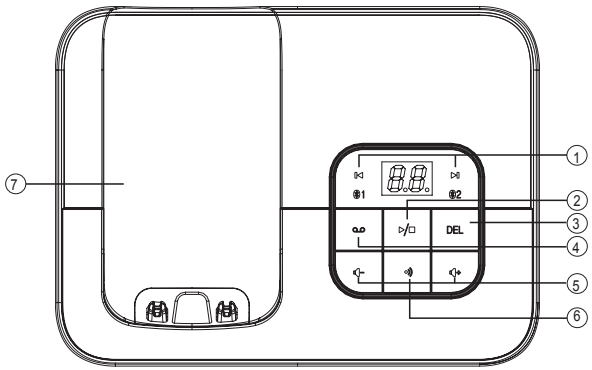

1. ⏮ / ⏭ SKIP BACKWARD/SKIP FORWARD

During message playback: Press once to repeat playing the current message from the beginning. Press twice to skip backward to play the previous message.

During message playback: Press to skip to play the next message.

2. ►/■ PLAY/STOP

In idle mode: Press once to play the new message.

During message playback: Press to stop the message playback.

3. DEL (DELETE)

In idle mode: Press and hold to delete all old messages.

During message playback: Press to delete the current message playing.

4. ANSWER ON/OFF

Press to turn on/off the answering machine.

5. / VOLUME DOWN/VOLUME UP

In idle / TAM message playing mode: Press to decrease or increase the volume
of speaker.

6. PAGING

Press to page the registered handsets.

7. CHARGING CRADLE

3.3 Base Station LED Display Behaviour

2-digit 7-seg LED Display	Behaviour
No matter answering machine is on or off:	
--	Flashing when date/time not set.
--/XX	Flashing between -- and XX when there are new messages (XX is the number of new messages).
When answering machine is off:	
Blank	No display when no old/new messages.
XX	Flashing when there are new messages (XX is the number of new messages).
F	Flashing when the memory of answer machine is full.
When answering machine is on:	
0	Steadily on when there is no message.
XX	Steadily on when there are XX old messages.
XX	Flashing when there are XX new messages.
F / XX	Flashing XX alternatively with FF when there are XX new voice messages received and the memory of answer machine is full.
F	Steadily on when memory is full and there is no new message.
A / XX	Flashing XX alternatively with A when the new voice message XX is recording.

XX	XX Steadily ON: Playing the old incoming message. XX Flashing: Playing the new incoming message. XX is the sequential number of message.
A1/A2	Flashing when playing/recording OGM (A1 = Answer & Record, A2 = Answer Only).
rA	Flashing when remote access is in progress.
LX	Steadily ON: Indicate the current volume level where X is from 1 to 8 (non-cyclic, optional for 0 to 8) during message playback, or from 0 to 8 during call screening or incoming message recording.
Bluetooth LED 1 and 2	LED Steadily ON: Bluetooth device 1 and/or 2 is/are connected. LED Flashing: Bluetooth device 1 and/or 2 is/are being paired. LED OFF: Bluetooth device 1 and/or 2 slot(s) is/are empty..

3.4 Handset LCD Display Icons

The screen display gives you information on the current status of the telephone.

Menu Icon	Description
	Contacts
	Call Log
	Settings
	Answering Machine Off
	Answering Machine On
	Bluetooth
	Media
	Answering Machines memory full
	3 new TAM messages
	More than 9 new calls
	Incoming call
	Outcoming call
	Unread missed call
	Keypad locked
	Keypad unlocked

	Recording in progress
	Alarm notification

Status Icon	Description
	Signal strength
	Handset number
	New voicemail message
	Answering Machine On
	Bluetooth On
	Ringer Off
	Alarm On
	Battery
	Battery charging
	Battery empty
	Speakerphone On
	Mute On
	Room monitoring

3.5 Menu Structure

When the handset LCD backlight is off, press any key to turn on the backlight, then press ▲/▼/◄/► to browse the main menu. Refer to the following table for the menu structure.

Key Press MENU ⟷ ▲/▼ ⟷ ▲/▼ ⟷ ▲/▼

Main Menu	**CONTACTS**	**CALL LOG**	**SETTINGS**
Sub menu	If contact list is empty: NEW ENTRY CAPACITY If contact list is not empty: NEW ENTRY Entry list Under a selected contact entry: CALL NUMBER EDIT ENTRY VIEW ENTRY DELETE ENTRY DELETE ALL CAPACITY EDIT CALL GROUP SPEED DIAL	If call log is empty: SETTINGS If call log is not empty: Entry list Under a selected call log entry: DETAILS DELETE ENTRY DELETE ALL CALL NUMBER STORE NUMBER SETTINGS	ALARM CLOCK CLOCK HANDSET BASE REGISTRATION

Key Press MENU ◄► ▲/▼ ◄► ▲/▼ ◄► ▲/▼

Main Menu	TAM	BLUETOOTH	MEDIA
Sub menu	PLAY MESSAGES DEL ALL OLD MSG ANSWER ON/OFF RECORD MEMO OUTGOING MSG TAM SETTINGS REMOTE ACCESS	SETUP MOBILE SETUP HEADSET ACTIVE DEVICES PAIRED DEVICES CHANGE PIN	CALLER PICTURES SLIDESHOW

3.6 Text and Digit Entry Table

The following table shows you where each letter and punctuation character can be found. This will be helpful when storing a name in the contacts or renaming your handset.

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

NOTES

1. Once a character is selected, the cursor will move to the next position after a short pause.
2. You can move the cursor within the text by pressing ◄/► to amend the text entry.
3. Press **Clear** to delete the last character.
4. Press and hold **Clear** to delete the entire text string.

3.6.1 English Character Set

Upper Case

Key Press	Alphanumeric Editing (For contact name editing and renaming handset)
1	space 1 @ _ # = < > ( ) & £ $ ¥ € [ ] { } ¤ §
2	A B C 2 Ä À Á Â Ã Å Æ Ç
3	D E F 3 È É Ë Ê Δ Φ
4	G H I 4 Ğ Ì Í Î Ï İ Γ
5	J K L 5 Λ
6	M N O 6 Ö Ò Ó Ô Õ Ø Ñ
7	P Q R S 7 β Ş Π Θ Σ
8	T U V 8 Ü Ù Ú Û
9	W X Y Z 9 Ý Ÿ Ω Ξ Ψ
0	. 0 , / : ; “ ‘ ! ¡ ? ¿ * + - % \ ^ ~ |

Lower Case

Key Press	Alphanumeric Editing (For contact name editing and renaming handset)
1	space 1 @ _ # = < > ( ) & £ $ ¥ € [ ] { } ¤ §
2	a b c 2 ä à á â ã å æ ç
3	d e f 3 è é ë ê Δ Φ
4	g h i 4 ğ ì í î ï ı Γ
5	j k l 5 Λ
6	m n o 6 ö ò ó ô õ ø ñ
7	p q r s 7 β ş Π Θ Σ
8	t u v 8 ü ù ú û
9	w x y z 9 ý ÿ Ω Ξ Ψ
0	. 0 , / : ; " ' ! ¡ ? ¿ * + - % \ ^ ~ |

4. BLUETOOTH®

4.1 Introducing BLUETOOTH®

Your new telephone system with BLUETOOTH® wireless technology has the following features:

- Pair up to four Bluetooth enabled devices (mobile phones or headsets) with the telephone base.
- Connect a maximum of two Bluetooth devices (two mobile or one mobile + one headset) to make and receive mobile calls. Only one device (one mobile or one headset) can be active on a call at a time.
- Paired devices will be shown in Paired Devices list, while Connected devices will be shown in the Active Devices list.
- Connect a Bluetooth enabled headset for making and receiving home calls.
- Conference mobile and home calls.
- Make and receive calls using your mobile phone plan with your cordless system handsets.

4.2 Important Information

- After plugging in the telephone base, wait at least 20 seconds before connecting a Bluetooth device. The screen shows **Bluetooth system busy** if you try to connect too soon.
- Refer to the user's manual of your Bluetooth enabled mobile phone or headset for more information about how that device uses Bluetooth connectivity.
- Bluetooth wireless technology operates within a short range (up to 9 metres) from the telephone base. Keep connected mobile phones and headsets within this range.

- If your mobile phone has poor reception in your home, the telephone cannot improve the reception. However, if you have a location in your house with better reception, you can leave your mobile phone in that location while you use the mobile line. In order for this to work, the mobile phone must be within 4.5 metres of the telephone base for optimal performance.
- Charge your mobile phone while it is connected to the telephone base. Your mobile phone's battery discharges faster while it is connected to the telephone base via Bluetooth wireless technology.
- Monitor your mobile phone's usage, because minutes may be deducted from your mobile plan for the duration of all mobile calls, depending on the terms of your plan.

The BLUETOOTH® word mark and logos are owned by Bluetooth SIG, Inc.

4.3 Bluetooth Setup

To use a Bluetooth enabled mobile phone with your telephone, you must first pair and connect your Bluetooth mobile phone with the telephone base. All handsets can be used to make or answer calls on the mobile phone line.

Bluetooth wireless technology operates within a short range (up to 9 metres). When you pair a Bluetooth mobile phone or Bluetooth headset to the telephone base, keep the device within 4.5 metres of the telephone base for optimal performance.

4.3.1 Add a Mobile Phone

Before you begin, make sure that you have mobile coverage and your Bluetooth enabled mobile phone is not connected to any other Bluetooth device. Refer to your mobile phone user's manual to learn how to search for or add new Bluetooth devices.

To pair and connect a mobile phone:

1. In main menu, press **Bluetooth**.
2. Press **OK** to select **Setup Mobile**.
3. If there is free pairing slot, the screen displays **Place the mobile phone next to the base**. Press **OK**.

   If there are already four paired devices on the device list, the screen displays **Maximum of 4 devices can be paired**. Follow the instructions to replace a device and remove it from the paired list.
4. The screen displays **Please set your mobile to search for devices**. The telephone base is in discoverable mode. Promptly turn on the Bluetooth feature of your mobile phone and search for the device **FS6325A**, then press **OK**.

   All devices that are connected to the telephone base are disconnected until the pairing process completes.
5. The screen displays the **Base Name** and **Code**. Enter the PIN of the telephone base (the default PIN is **0000**) into your mobile phone, if necessary, to continue the pairing process. The handset displays **Pairing is in progress**. On your mobile phone, press to choose **FS6325A** to connect with the telephone base.

Your mobile phone may require a passcode. In this case, enter the mobile phone passcode into the handset and press **OK**.

6. Upon successful pairing, the handset displays **Paired with Mobile**. Press **OK**.
7. If there are already two connected devices on the Active Device list, the handset shows **Maximum of 2 devices can be connected**. Follow the instructions to replace a device and remove it from the Active Device list.
8. The handset displays **Connecting Mobile X to the base...**, then **Mobile setup is completed. Device is connected.** when the operation is successful.
9. When a device is successfully connected, you hear a confirmation tone. The corresponding status icon (1 or 2) displays, and the corresponding device light on the telephone base (1 or 2) turns on.

NOTES

1. The pairing process may take up to one minute. If the pairing process fails, try again.
2. If you put the handset back in the telephone base or charger while pairing, the process is cancelled and the handset returns to idle mode.
3. If the device connection fails, the disconnected device will be displayed in the Paired Devices list and the Auto-connect function will be enabled.

4.3.2 Add a Headset

Before you begin, make sure that your Bluetooth enabled headset is not connected to any other Bluetooth device. Refer to your headset user's manual to learn how to search for or add new Bluetooth devices.

To pair and connect a headset:

1. In main menu, press **Bluetooth**.
2. Press ▲/▼ to highlight **Setup Mobile**, then press **OK**.

3. If there is free pairing slot, the screen displays **Place Bluetooth headset next to the base**. Press **OK**.

   If there are already four paired devices on the device list, the screen displays **Maximum of 4 devices can be paired**. Follow the instructions to replace a device and remove it from the paired list.

4. The screen displays **Please set your headset to discoverable mode.** The telephone base is in discoverable mode. Set your headset to discoverable mode (refer to the user's manual of your headset), then press **OK**.

   All devices that are connected to the telephone base are disconnected until the pairing process completes.

5. The screen displays **Searching for Bluetooth headset...**

6. When the screen displays the found devices, press ▲/▼ to highlight your desired headset and then press **OK**.

7. Enter the PIN of your headset. The PIN for most Bluetooth devices is **0000** (refer to the user's manual of your headset). Then press **OK**.

8. The handset displays **Pairing is in progress**, then **Paired with Headset** when the operation is successful. Press **OK**.

   If there is another headset already active, the screen shows **Only 1 headset can be connected.** and prompts you to replace an existing active device. Follow the instructions to remove the handset from the Active Device list.

9. The handset then displays **Headset X is paired to the base. Connect now?**. Press **Yes** to connect.

   If there are already two connected handsets on the Active Device list, the handset shows **Maximum of 2 devices can be connected**. Follow the instructions to replace a device and remove it from the Active Device list.

10. The handset displays **Connecting Headset X to the base...**, then **Headset setup is completed. Device is connected.** when the operation is successful.

11. When a device is successfully connected, you hear a confirmation tone. The corresponding status icon (1 or 2) displays, and the corresponding device light on the telephone base (1 or 2) turns on.

NOTES

1. The pairing process may take up to one minute. If the pairing process fails, try again.
2. When a connected headset is charging, it may disconnect from the telephone base and the corresponding light on the telephone base (1 or 2) turns off. For some headset models, you may need to turn on the headset and reconnect it to the telephone base again.

4.3.3 Auto Connection

When an active device moves within Bluetooth range of the telephone base, or is turned on within range, the telephone base tries to connect to the device. When the device moves out of range, it is disconnected. Your device might make a connect or disconnect sound.

A connected device could also be disconnected by:

Turning off the Bluetooth device.

Turning off the Bluetooth feature of the device.

Disconnecting through the telephone base **Active Device list** or **Paired Device list**. The telephone base will not attempt to reconnect until your device is moved out of range and then moves back in range again.

4.3.4 Device Lists and Connection

Up to four devices can be paired to the telephone base. All paired devices are shown on the Paired Device list. To use a paired device, it must be in an active slot on the Active Device list and connected.

Only one Bluetooth mobile phone or a headset can be on a call at a time.

Once you have paired a device with the telephone base, you do not need to repeat the pairing procedure again unless you delete the device from the Paired Device list.

NOTE

When connecting a Bluetooth device to the device list, all connected devices will be temporarily disconnected until the procedure is complete. It may take up to two minutes to reconnect.

4.3.5 Review the Active Device List

1. In main menu, press **Bluetooth**.
2. Press ▲/▼ to highlight **Active Devices**, then press **OK**.
3. Press ▲/▼ to browse the list.

4.3.6 Connect/Disconnect a Device

While in the active devices or paired devices menu, you may connect or disconnect your device.

1. In main menu, press **Bluetooth**.
2. Press ▲/▼ to highlight **Active Devices** or **Paired Devices**, then press **OK**.
3. Press ▲/▼ to highlight a device, then press **OK**.
4. Press ▲/▼ to highlight **Connect** or **Disconnect** (whichever is applicable), then press **OK** to confirm.
5. The handset displays **Device Connected** or **Device Disconnected**. You hear a confirmation tone.

NOTE

When your active device is connected, you are prompted to select **Disconnect**. When your active device is disconnected, you are prompted to select **Connect**.

4.3.7 Remove an Active Device

When you already have the maximum of two active devices and you want to add another device, you must first delete a device from the Active Device list.

1. In main menu, press **Bluetooth**.
2. Press ▲/▼ to highlight **Active Devices**, then press **OK**.
3. Press ▲/▼ to highlight a device, then press **OK**.

4. Press ▲/▼ to highlight **Remove Active**, then press **OK** to confirm.
5. The handset displays **Device removed from the active device list** and you hear a confirmation tone.

NOTES

1. The removed device will be shown as **Empty** in the Active Device list.
2. The removed device will still be shown in the Paired Device list.

4.3.8 Add an Active Device

If there is only one device active or no device is active, you can add a device to the Active Devices list.

1. In main menu, press **Bluetooth**.
2. Press ▲/▼ to highlight **Active Devices**, then press **OK**.
3. Press ▲/▼ to highlight **Empty**, then press **OK**.
4. Press **OK** to select **Add**.
5. If there are devices paired but not all connected, press ▲/▼ to highlight a desired device and then press **OK**.

   If paired devices already exist and all of them are connected, the handset displays **All paired devices are already connected**.

   If you want to add a headset to the Active Device list but another headset has been connected already, the handset displays **Only 1 headset can be connected**.
6. The handset displays **OK**. You hear a confirmation tone.

4.3.9 Review the Paired Device List

1. In main menu, press **Bluetooth**.
2. Press ▲/▼ to highlight **Paired Devices**, then press **OK**.
3. Press ▲/▼ to browse the list.

4.3.10 Rename a Paired Device

You can change the name of a paired device on the Paired Device list.

1. In main menu, press **Bluetooth**.
2. Press ▲/▼ to highlight **Paired Devices**, then press **OK**.
3. Press ▲/▼ to highlight a device, then press **OK**.
4. Press ▲/▼ to highlight **Rename**, then press **OK** to confirm.
5. Press ◄/►, **Clear** and the dialling keys to edit the device name as necessary. Then press **OK** to confirm.
6. The handset displays **Saved** and you hear a confirmation tone.

NOTES

1. A maximum of 16 characters can be entered in the device name.
2. If the revised name is duplicated with any paired device, you will be prompted to rename the device again.

4.3.11 Remove a Paired Device

When you already have the maximum of four paired devices and you want to pair another device, you must first delete a device from the Paired Device list.

1. In main menu, press **Bluetooth**.
2. Press ▲/▼ to highlight **Paired Devices**, then press **OK**.
3. Press ▲/▼ to highlight a device, then press **OK**.
4. Press ▲/▼ to highlight **Remove Paired**, then press **OK**.
5. The handset displays **Remove device from the paired list?**. Press **Yes** to confirm.
6. The handset displays **OK** and you hear a confirmation tone.

4.3.12 Replace an Active Device

If you want activate a paired device but the Active Device list has no free slot, you can replace an active device.

1. In main menu, press **Bluetooth**.
2. Press ▲/▼ to highlight **Paired Devices**, then press **OK**.
3. Press ▲/▼ to highlight a device, then press **OK**.
4. Press **OK** to select **Replace Active**, then press **OK**.
5. Press ◄/► to highlight a device to be replaced, then press **OK**.
6. The handset displays **Device added to active list. Connect now?**. Press **No** to connect later or press **Yes** to connect now.
7. If you choose to connect the active device, the handset displays **Device Connected** and you hear a confirmation tone.

NOTE

When adding, removing, or replacing a Bluetooth device on the Active Device list, all connected devices are temporarily disconnected until the procedure is complete. It may take up to two minutes to reconnect.

4.3.13 Change PIN

You are required to enter a PIN when establishing a Bluetooth connection. The default PIN of your telephone base is **0000**.

To change the PIN:

1. In main menu, press **Bluetooth**.
2. Press ▲/▼ to highlight **Change PIN**, then press **OK**.
3. The handset displays **Enter New PIN** and the existing PIN.
4. Use the dialling keys to enter a new 4-digit code.
   Press **Clear** to erase a digit.
   Press and hold **Clear** to erase all digits.
   Press ◄/► to move the cursor to the right or left.
5. Press **OK** to confirm.
6. The handset displays **Saved** and you hear a confirmation tone.

5. USING THE PHONE

5.1 Make a Home Call

5.1.1 Preparatory Dialling a Home Call

Enter the telephone number, then press or .

5.1.2 Direct Dialling a Home Call

Press or , then enter the telephone number.

5.1.3 Call from the Contacts

1. In main menu, press **Contacts**.
2. Press ▲/▼ to browse the list and highlight the desired contact entry.
3. Press **Option** and **OK** to select **Call Number**.

   OR

   Press or .
4. If the contact has one number only, the number will be dialled immediately.
   If the contact has multiple numbers, press ▲/▼ to highlight the desired one and press **OK**.

5.1.4 Call from the Call Log

1. In main menu, press **Call Log**.
2. Press ▲/▼ to browse the list and highlight the desired call log entry.
3. Press **Option** and ▲/▼ to highlight **Call Number**, then press **OK**.

   OR

   Press or .

5.1.5 Call from the Redial List

1. In main menu, press and hold or to enter the redial list.
2. Press ▲/▼ to browse the list and highlight the desired redial list entry.

3. Press **Option** and ▲/▼ to highlight **Call Number**, then press **OK**.

   OR

   Press or .

5.2 Answer a Home Call

If the handset is not on the charging cradle:

Press , or **Answer** to answer the call.

OR

If the handset is on the charging cradle:

Pick up the handset from the cradle to answer the call.

NOTE

You need to turn on Auto Answer before you can answer a call by this method. Please see page 36 for details.

5.3 End a Home Call

Press during a call to end the call.

OR

Put the handset on the telephone base or charger.

5.4 Call Waiting on the Home Line

If you subscribe to call waiting service from your telephone service provider, you hear a tone if someone calls while you are already on a call.

Press **Option** and then **OK** to select **CW Accept** to put your current call on hold and take the new call.

Press **Brok** at any time to switch back and forth between calls.

5.5 Make a Mobile Call

You can connect a maximum of two Bluetooth enabled mobile phones to the telephone base, but only one mobile phone can be used on a mobile call at a time.

5.5.1 Preparatory Dialling a Mobile Call

Enter the telephone number, then press **Option** and ▲/▼ to highlight **Call with Mobile X**, and press **OK** to dial the number.

5.5.2 Direct Dialling a Mobile Call

In main menu, press **Mobile**. Enter the telephone number, then press or .

NOTE

If you have only one mobile phone connected to the telephone base, it is automatically selected to make mobile calls. If you have two mobile phones connected to the telephone base, the telephone system prompts you to select a mobile phone before you make a mobile call. Press ◄/► to select the desired mobile phone, then press **OK**.

5.6 Answer a Mobile Call

Press , or **Answer** to answer the call.

5.7 End a Mobile Call

Press during a call to end the call.

OR

Put the handset on the telephone base or charger.

NOTE

You can also use your mobile phone to answer the call. If you answer with your mobile phone, it disconnects from the telephone base.

5.8 Call Waiting on the Mobile Line

If you subscribe to call waiting service from your mobile phone service provider, you hear a beep if someone calls while you are already on a call.

Press **Option** and then **OK** to select **CW Accept** to put your current call on hold and take the new call.

Press **Brok** on the handset at any time to switch back and forth between calls.

5.9 Answer an Incoming Mobile Call While on a Home Call

When you receive an incoming mobile call during a home call, the handset displays the mobile device name and then the calling number display. The telephone base and all other handsets ring.

5.9.1 Answer the Incoming Mobile Call

Press **Option** and then **OK** to select **CW Accept** to answer the mobile call.
The home call will be put on hold automatically.

5.9.2 End the Mobile Call

Press on the handset. The home line will also be hang up.

5.9.3 Resume the Home Call on Hold

Press **Brok** to put the home line off hold.

NOTE

If you have voicemail service active on your mobile phone, and you do not answer the incoming mobile call, the call is answered by your mobile phone's voicemail. Contact your mobile phone service provider for more information about voicemail service.

5.10 Answer a Home Call While On a Mobile Call

When you receive a home call during a mobile call, the handset displays **External Call** and then the calling number display. The telephone base and all other handsets ring.

5.10.1 Answer the Incoming Home Call

Press **Option** and then **OK** to select **CW Accept** to answer the home call.
The mobile call will be put on hold automatically.

5.10.2 End the Home Call

Press on the handset. The mobile line will also be hang up.

5.10.3 Resume the Mobile Call on Hold

Press **Brok** to put the mobile line off hold.

NOTE

If you have turned on your answering system and you do not answer the incoming home call, the call is answered by your answering system.

5.11 Conference Calls

5.11.1 Make a Conference Call between Home Call and Mobile Call

When you have calls established on the home and mobile lines with either one put on hold, you can press **Conf** to create a 3-way conference. For more information on conference calls, please refer to page 89.

5.11.2 End a Conference Call

Put the handset back in the telephone base or charger.

OR

Press **End** or on the handset.

5.11.3 Using the Home and Mobile Lines Together

You can be on two different calls at the same time using the mobile line and home line and two handsets.

You cannot be on a call using the mobile line and a Bluetooth headset via the home line at the same time. These are both Bluetooth devices and only one can be used at a time.

If you are on a call using the mobile line, you cannot join the call using your paired mobile phone. However, you can join the call using another FS6325A device. Your mobile phone is being used for the phone call so only features that are normally available during a call can be used.

5.12 Handsfree

During a call, press on the handset to switch between the speakerphone and normal handset use.

5.13 Earpiece / Handsfree Volume

There are five volume levels (Level 1 to Level 5) to choose from for each of earpiece and speaker volume. While on a call, you can adjust the listening volume on the handset. If it is a mobile call and the volume is too loud, too quiet or drops out, try changing the volume on your mobile phone.

On some mobile phones, changing the volume on the mobile phone affects your mobile call volume on the handsets or telephone base.

During a call, press ▲/▼ to increase or decrease the volume level respectively. The current setting is shown.

When you end the call, the settings will remain at the last selected level.

5.14 Silencing the Ringer

When the telephone is ringing, you can temporarily silence the ringer of the handset or telephone base without disconnecting the call. The next call rings normally at the preset volume.

To silence the handset ringer:

Press **Silent** or on the handset and **Ringer mute** appears.

To silence the base ringer:

Press until the screen displays **L0**.

NOTE

While in idle mode, you can press and hold to turn the handset ringer on or off.

5.15 Auto Answer

As long as you have Auto Answer set to **On** you can answer a call by lifting the handset off the base. If you have switched Auto Answer off, you will need to press , or **Answer** on the handset. Please see page 65 for details.

5.16 Lock Keypad

Lock the keypad to prevent accidental dialling while carrying the handset around.

In idle mode, press and hold . The display shows **Keypad locked**.

To unlock the keypad, press and hold . The display shows **Keypad Unlocked**.

5.17 Call Timer

Your handset will automatically time the duration of all external calls. The handset display shows the call duration both during and for a few seconds after your call is terminated.

5.18 Out of Range Warning

When the handset goes out of range of the base, the line will hang up if you are on a call. When you move back within range, the handset will automatically reconnect to the base.

5.19 Mute

Use the mute function to turn off the microphone. You can hear the caller, but the caller cannot hear you.

While on a call, press ◄ to mute the microphone and call muted icon will be displayed. Your caller cannot hear you.

Press ◄ again to unmute the microphone.and the call muted icon disappears.

5.20 Hold

You can place any call on hold. You hear an alert tone at the telephone base if you have not taken the call off of hold after 14 minutes. You hear another alert tone at the telephone base 30 seconds later. At 15 minutes on hold, the call on hold automatically disconnects.

While on a call, press on the handset. The current call will be put on hold.

Press again to resume the call.

5.21 Chain Dialling

Use this feature to initiate a dialling sequence from numbers stored in the contact list or call log while you are on a call.

Chain dialling can be useful if you wish to access other numbers (such as bank account numbers or access codes) from the contact list or call log.

5.21.1 Access a Number in the Contact List While on a Call

1. Press **Option** and ▲/▼ to highlight **Contact list**, then press **OK** to select.
2. Press ▲/▼ to highlight the desired contact entry and press **OK** or .
3. If the contact has one number only, the number will be dialled immediately. If the contact has multiple numbers, press ▲/▼ to highlight the number and press **OK**.

5.21.2 Access a Number in the Call Log While on a Call

1. Press **Option** and ▲/▼ to highlight **Call log**, then press **OK** to select.
2. Press ▲/▼ to highlight the desired number and press **OK** to dial the number.

NOTES

1. You can only view the numbers in the contact list and call log. You cannot edit, delete or save entries.
2. You cannot copy a call log entry into the contact list while on a call.
3. Press **Back** to exit the contact list or call log while on a call.

5.22 Redial

You can redial up to 30 of the last numbers called. If you have stored a name in the contact list to go with the number, the name will be displayed instead.

NOTE

After making a call, further key input after call timer is displayed will not be stored in the redial list.

5.22.1 Review the Redial List

1. In main menu, press and hold or to enter the redial list.
2. Press ▲/▼ to browse the redial list.
3. Press **Details** or ◄ to view the details of an entry. If the number is already stored in contact list, the name and number will all be displayed.

NOTE

If there are no numbers in the redial list, the handset will display **List Empty!**.

5.22.2 Dial a Redial Entry

1. In main menu, press and hold or .
2. Press ▲/▼ to browse the redial list and highlight an entry.
3. Press **Options** and ▲/▼ to highlight **Call Number**, then press **OK**.

   OR

   Press or to dial the number displayed.

5.22.3 Save a Redial Entry to the Contact List

1. In main menu, press and hold or .
2. Press ▲/▼ to browse the redial list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Store Number**, then press **OK**.
4. The screen displays **Copy number to:**. Press ◄/► to select the desired type for the number, then press **OK**.
5. Use ▲/▼ to highlight any of the contact information. Then press ◄/► and the dialling keys to select and enter information as necessary. Please see page 42 for details on creating a new entry.
6. Press **OK** to save the entry. **Saved** displays and you hear a confirmation tone.

5.22.4 Delete a Redial Entry

1. In main menu, press and hold or .
2. Press ▲/▼ to browse the redial list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Delete Entry**, then press **OK**.
4. The handset displays **Delete?**. Press **Yes** to confirm.

5.22.5 Delete all Redial Entries

1. In main menu, press and hold or .
2. Press ▲/▼ to browse the redial list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Delete All**, then press **OK**.
4. The screen displays **Delete All Dialled Calls?**. Press **Yes** to confirm. All redial list entries will be deleted.

5.23 Call Recording

1. During a call, press **Option** and ▲/▼ to highlight **Record Call**, then press **OK**.
2. You hear a beep and the call recording starts.
3. Press **Stop** when you finish recording. The display returns to the call screen.
4. The recorded conversation is saved like a recorded memo. It can be played back from the new TAM messages, similar to memo playback. During the recorded conversation playback, name, number, date and time will display if available.

NOTE

2-way recording is applicable to record conversation with an external call.

5.24 Find Handset (Paging)

This feature helps you find a misplaced handset.

You can locate the handset by pressing on the base station. All handsets registered to the base will ring up and display **<<Paging>>**.

You can stop the paging by pressing any key on the handset or on the base again.

NOTES

1. If the handset ringer volume is set to off, the handset still rings when paged.
2. If there is no response after 60 seconds, paging ends.

5.25 Power On/Off Handset

In idle mode, press and hold for around five seconds to power off the handset. The handset displays **Switch off handset?**. Press **Yes** to confirm.

When the handset is off, press and hold for around five seconds to power on the handset.

5.26 Turn On/Off LCD Backlight

When the handset LCD backlight is off, press once to turn it on.

When the handset LCD backlight is on, press once to dim it.

When the handset LCD backlight is dim, press once to turn it off.

6. CONTACTS

The contact list stores up to 500 entries with up to 24 digits for each phone number (Home/Mobile/Office) and 16 characters for each name (Family Name/Given Name).

Contact list entries are sorted alphabetically by Family Name. Spaces and digits take the first priority. If only the Given Name was entered in the contact list, this is incorporated into the sort order instead of the Family Name.

6.1 Create and Review Entries

6.1.1 Create a New Entry

1. In main menu, press **Contacts**.
2. Press **OK** to select **New Entry**.
3. Press ▲/▼ to highlight one of the following contact information:
   Family Name
   Given Name
   Home Number
   Mobile Number
   Office Number
   Group
   Picture
4. Press the dialling keys to enter the name(s) as appropriate.
   Press **Clear** to erase a character.
   Press and hold **Clear** to erase all characters.
   Press ◄/► to move the cursor to the left or right.
5. Press the dialling keys to enter the telephone number(s) as appropriate.
   Press **Clear** to erase a digit.
   Press and hold **Clear** to erase all digits.
   Press ◄/► to move the cursor to the right or left.
   Press and hold **0** to insert a dialling pause (a **P** appears).

6. Press ◄/► to select a desired call group.

7. Press ◄/► and then ▲/▼ to browse and select a desired picture. Press **Back** to confirm.

8. Press **OK** to save the entry. The screen shows **Saved** and you hear a confirmation tone.

NOTES

1. While editing, press ✱ to toggle between the uppercase and lowercase letters.
2. Family Name/Given Name and at least one phone number should be entered in order to save a contact entry.
3. A contact entry can only be assigned to one call group at a time.
4. If the caller ID matches with the contact entry and that entry has been saved with a caller picture, the picture will be displayed in the incoming call screen.

6.2 Add a Predialled Telephone Number to the Contact List

You can save a predialled telephone number to the contact list.

1. Enter the telephone number while in main menu.
2. Press **Option** and ▲/▼ to highlight **Store Number**, then press **OK**.
3. The screen displays **Copy number to:**. Press ◄/► to select the desired type for the number, then press **OK**.
4. Use ▲/▼ to highlight any of the contact information. Then press ◄/► and the dialling keys to select and enter information as necessary. Please see page 42 for details on creating a new entry.
5. Press **OK** to save the entry. **Saved** displays and you hear a confirmation tone.

6.3 View the Contacts

Contact entries are sorted alphabetically.

1. In main menu, press **Contacts**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **View Entry**, then press **OK**.
4. Press ▲/▼ to view the entry details.

6.4 Alphabetical Search

You can use the 1-character search to find your contacts quickly and efficiently.

To start the search:

1. In main menu, press **Contacts**.
2. When the contact entries appear, use the dialling keys to enter a letter associated with the initial of the desired contact name. For example, press **7** four times to view entries beginning with **S** if **Brown**, **Queenie**, **Rita**, **Samuel** exist in the contact list. The handset will show the first entry named with the same first letter with the quick search key. If there is no name matching the letter entered, the next closest match in alphabetical order appears.

6.5 Dial, Edit or Delete a Contact Entry

6.5.1 Dial a Contact Entry

1. In main menu, press **Contacts**.
2. Press ▲/▼ to highlight the desired contact entry.
3. Press **Option** to highlight **Call Number**, then press **OK**.

   OR

   Press or .
4. If the contact has one number only, the number will be dialled immediately.
   If the contact has multiple numbers, press ▲/▼ to select the desired one and press **OK**.

6.5.2 Edit a Contact Entry

1. In main menu, press **Contacts**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Edit Entry**, then press **OK**.
4. Press ▲/▼ to highlight any of the contact information. Then press ◄/►, **Clear** and the dialling keys to edit information as necessary. Please see page 42 for details.
5. Press **OK** to save the entry. **Saved** displays and you hear a confirmation tone.

6.5.3 Delete a Contact Entry

1. In main menu, press **Contacts**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Delete Entry**, then press **OK**.
4. The screen displays **Delete XX?**, where **XX** denotes the contact name.
5. Press **Yes** to confirm. The entry will be deleted.

NOTE

Once a contact entry is deleted, it cannot be retrieved.

6.5.4 Delete All Contact Entries

1. In main menu, press **Contacts**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and ▲/▼ to select **Delete All**, then press **OK**.
4. The screen displays **Delete All?**.
5. Press **Yes** to confirm. All entries will be deleted.

6.6 View Capacity

If there are no contacts in the contact list:

1. In main menu, press **Contacts**.
2. The handset displays **List Empty!**

3. Press ▲/▼ to highlight **Capacity**, then press **OK**.
4. The handset displays **Memory Details: 0/500 Used**.

If there is/are contact entry(ies) in the contact list:

1. In main menu, press **Contacts**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Capacity**, then press **OK**.
4. The handset displays **Memory Details: X/500 Used**, where X denotes the number of the existing contacts.

6.7 Edit Call Group

6.7.1 Rename the Call Group

1. In main menu, press **Contacts**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Edit Call Group**, then press **OK**.
4. Press ▲/▼ to highlight a desired call group entry, then press **OK**.
5. Press ◄/►, **Clear** and the dialling keys to edit the call group name as necessary.
6. Press **OK** to save. **Saved** displays and you hear a confirmation tone.

6.7.2 Set the Ringtone of the Call Group

1. In main menu, press **Contacts**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Edit Call Group**, then press **OK**.
4. Press ▲/▼ to highlight a desired call group entry, then press **OK**.
5. Press ▲/▼ to highlight **Set Ringtone**.
6. Press ◄/► to select a desired a ringtone. A sample of each tone plays as you scroll through the choices.
7. Press **OK** to save. **Saved** displays and you hear a confirmation tone.

6.8 Speed Dial

6.8.1 Assign a Speed Dial Contact Entry

You can assign eight of your contact entries to a speed dial slot (**2**-**9**). The speed dial entries are shared by all handsets.

Up to eight speed dial entries can be stored. The speed dial number must be created from an existing entry in the contacts.

1. In main menu, press **Contacts**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Speed Dial**, then press **OK**.
4. Press ▲/▼ to highlight an empty speed dial key slot, then press **OK**.
5. Press ▲/▼ to highlight a desired contact entry, then press **OK**.
6. If the contact has one number only, the screen displays **Saved** and you hear a confirmation tone. If the contact has multiple numbers, press ▲/▼ to select the desired one and press **OK**. The number will be assigned to the speed dial key.

6.8.2 View the Speed Dial List

1. In main menu, press **Contacts**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Speed Dial**, then press **OK**.
4. Press ▲/▼ to browse the speed dial list.

6.8.3 Dial a Speed Dial Entry

In main menu, press and hold the dialling key (**2**-**9**) corresponding to the assigned entry you wish to call.

OR

In main menu, press or , then press and hold the dialling key (**2**-**9**) corresponding to the assigned entry you wish to call.

6.8.4 Reassign a Speed Dial Entry

1. In main menu, press **Contacts**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Speed Dial**, then press **OK**.
4. Press ▲/▼ to highlight an assigned speed dial key, then press **OK**.
5. Press **OK** again to select **Edit Entry**.
6. Press ▲/▼ to highlight a desired contact, then press **OK**.
7. If the contact has one number only, the speed dial key will be reassigned to the selected number. If the contact has multiple numbers, press ▲/▼ to select a desired one and press **OK**.

6.8.5 Delete a Speed Dial Entry

1. In main menu, press **Contacts**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Speed Dial**, then press **OK**.
4. Press ▲/▼ to highlight an assigned speed dial key, then press **OK**.
5. Press ▲/▼ to highlight **Delete Entry**, then press **OK**.
6. The handset displays **Delete?**
7. Press **Yes** to confirm. The contact number stored in the speed dial key will be deleted.

NOTE:

Deleting speed dial entries does not affect the contact entries.

7. CALL LOG

7.1 Calling Number Display

If you have subscribed to Calling Number Display service, you will be able to see your caller's number on your handset display (provided it is not blocked) prior to answering the call. If your caller's name is stored in the contact list and a number match is found, you will see the caller's name on the display instead.

You will see the following displays on handset if the corresponding data are received from network:

- **Withheld**: When the caller ID data is hidden by the caller.
- **Unavailable**: When the caller ID data is not provided by the network.
- **Callback**: When the caller uses ringback service to initiate a call when line is free.
- **International**: When the caller ID data is received as an international number.
- **Public**: When the call is made from a network public phone.
- **Operator**: When the call is from network operator.

NOTES

Your phone can store up to 50 incoming calls and 30 outgoing calls with date/time information in the call log.

1. For each call log entry, 16 characters (for name) and 24 digits (for number) can be stored.
2. If the phone number has more than 24 digits, it will not be saved or shown in the call log.
3. "No Number" calls will not be displayed in the call log.

7.1.1 View the Call Log

Review the call log to find out who called, to easily return a call, or to copy the caller's name and number into your contact list. **List Empty!** appears if there are no records in the call log.

1. In main menu, press **Call Log**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Details** to view the date and time information of the selected entry.

NOTES

1. The call log (including received calls, dialled calls and missed calls) is arranged in the date/time order with the most recent one putting at the top of the list.
2. When the call log is full, the oldest call will be replaced by a new call.

7.1.2 Dial a Call Log Entry

1. In main menu, press **Call Log**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Call Number**, then press **OK**.

   OR

   Press or .
4. The number will be dialled.

7.1.3 Save a Call Log Entry to the Contact List

1. In main menu, press **Call Log**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Store Number**, then press **OK**.
4. The handset displays **Copy number to:**. Press ◄/► to select the desired type for the number, then press **OK**.
5. Use ▲/▼ to highlight any of the contact information. Then press ◄/► and the dialling keys to select and enter information as necessary. Please see page 42 for details on creating a new entry.

6. Press **OK** to save the entry. **Saved** displays and you hear a confirmation tone.

NOTE

When you try to save a number already stored in the contacts, the screen shows **Number Exist**. When you try to save a name already stored in the contacts, the handset displays **Name Exist**.

7.1.4 Delete a Single Entry in the Call Log

1. In main menu, press **Call Log**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and **OK** to select **Delete Entry**.
4. The handset displays **Delete?**.
5. Press **Yes** to confirm. The selected call log entry will be deleted.

7.1.5 Delete the Entire Call Log

1. In main menu, press **Call Log**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Delete All**, then press **OK**.
4. The handset displays **Delete All Calls?**.
5. Press **Yes** to confirm. All call log entries will be deleted.

7.2 Call Log Settings

7.2.1 Set the Call Log Type

If there are no call log entries:

1. In main menu, press **Call Log**.
2. The handset displays **List Empty!**
3. Press **OK** to select **Settings**.
4. Press ◄/► to select **All Calls** or **Missed Calls**.
5. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

If there is/are call log entry(ies):

1. In main menu, press **Call Log**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Settings**, then press **OK**.
4. Press ◄/► to select **All Calls** or **Missed Calls**.
5. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

NOTES

1. If **All Calls** is selected, all incoming and outgoing calls including answered and missed calls, will be displayed in the call log.
2. If **Missed Calls** is selected, all unanswered calls will be displayed in the call log. The unanswered calls which have not been read will also be marked with **a Solid dot** in the call log. The dot will become hollow after the entry is read.

7.2.2 Set the New Call Alert

If there are no call log entries:

1. In main menu, press **Call Log**.
2. The handset displays **List Empty!**
3. Press **OK** to select **Settings**.
4. Press ▲/▼ to highlight **New Call Alert**.
5. Press ◄/► to select **On** or **Off**.
6. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

If there is/are call log entry(ies):

1. In main menu, press **Call Log**.
2. Press ▲/▼ to browse the list and highlight an entry.
3. Press **Option** and ▲/▼ to highlight **Settings**, then press **OK**.
4. Press ▲/▼ to highlight **New Call Alert**.
5. Press ◄/► to select **On** or **Off**.
6. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

7.3 Voicemail Indicator

Voice Mail Waiting Indication (VMWI) ⌾ is an indication given to you when a new voice mail message is waiting on the telephone service provider. This feature is available if you have subscribed to the voicemail service from you network
service provider.

The telephone is designed to provide visual indication when a new message is left in your telephone service provider. When a new message is left, ⌾ will be displayed and the New Event LED ≡ will flash on the handsets. After you have listened to your message(s), the ⌾ icon will disappear and the indicators on the handsets turn off automatically.

To dial to the voicemail number:

In main menu, press and hold ⌾ in the keypad. The voicemail number will be dialled.

OR

When there is/are new voicemail(s), press ≡ in the main menu.
If new voicemail(s) is the only new event, the voicemail number will be dialled directly.
If there are other new events, press ▲/▼ to highlight **VoiceBox** and press **OK** to dial the voicemail number.

NOTE

The voicemail number is customer dependent and user programmable. For China, dialling to the voicemail number equals to dialling to the IP number.

8. MEDIA

8.1 View Caller Pictures

1. In main menu, press **Media**.
2. Press **OK** to select **Caller Pictures**.
3. Press ◄/► or **View** and then ▲/▼ to view the default caller pictures.
4. Press **Back** to exit.

NOTE

Please see page 43 for details on setting a caller picture for a contact entry.

8.2 View Slideshow of Wallpapers

1. In main menu, press **Media**.
2. Press ▲/▼ to highlight **Slideshow**, then press **OK**.
3. Press **Start** to view the slideshow of the default wallpapers.
4. Press **Back** to exit.

NOTE

Please see page 59 for details on setting slideshow of wallpapers as handset screensaver.

9. NEW EVENTS

In the main menu of the handset, a blue circle appearing at the top right corner of Call Log or TAM denotes the new event status. The blue circle displays a number or sign with indications as below:

• **1-9**: New calls or TAM messages

• **...**: More than nine new calls or TAM messages

The new events screen will not appear when all new calls and new TAM messages have been read. Thus, if there is no new event, pressing ≡ on the handset will display **No New Event** and return to main menu.

Any new events (calls, TAM messages) will be shown as **New**. When new voicemail is received, a **<!>** will display.

If one of the new calls or new TAM messages has been read, the counter of new will diminish by one. In the event that a new event is decremented to zero, this event shall be removed from the new events screen.

In idle state, the New Event LED ≡ will flash for any new calls, new TAM messages or new voicemails.

9.1 View New Events

In main menu, press ≡.

When there is only one type of new event:

- If the new event is new call(s), the call log will display.
- If the new event is new TAM message(s), the new TAM message(s) will play.
- If the new event is new voicemail(s), the voicemail number will be dialled.

OR

When there are multiple types of new events:

Press ▲/▼ to highlight **Calls**, **Messages** or **Voicemails**, then press **OK**. Based on your selection, the call log will display, the new TAM message(s) will play, or the voicemail number will be dialled.

10. PHONE SETTINGS

10.1 Alarm Settings

10.1.1 Turn On or Off the Alarm

1. In main menu, press **Settings**.
2. Press **OK** to select **Alarm Clock**.
3. Press ▲/▼ to browse the alarm list and highlight an alarm, then press **OK**.
4. Press ◄/► to turn on or off the selected alarm. The tick sign denotes the alarm is activated.
5. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

NOTE

If alarm is set and the preset alarm time arrives, the alarm name will display and flash with the set time. Press **Snooze** to snooze the alarm or press **Off** to switch it off.

10.1.2 Set the Alarm Time

1. In main menu, press **Settings**.
2. Press **OK** to select **Alarm Clock**.
3. Press ▲/▼ to browse the alarm list and highlight an alarm, then press **OK**.
4. Press ▲/▼ to highlight **Time**.
5. Press the dialling keys and ◄/► to enter the alarm time.
6. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.1.3 Set the Alarm Name

1. In main menu, press **Settings**.
2. Press **OK** to select **Alarm Clock**.
3. Press ▲/▼ to browse the alarm list and highlight an alarm, then press **OK**.
4. Press ▲/▼ to highlight **Name**.
5. Press ◄/►, **Clear** and the dialling keys to enter the alarm name.
6. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.1.4 Set the Alarm Melody

1. In main menu, press **Settings**.
2. Press **OK** to select **Alarm Clock**.
3. Press ▲/▼ to browse the alarm list and highlight an alarm, then press **OK**.
4. Press ▲/▼ to highlight **Melody**.
5. Press ◄/► to select a desired melody. A sample of each melody plays as you scroll through the choices.
6. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.1.5 Set the Alarm Repetition

1. In main menu, press **Settings**.
2. Press **OK** to select **Alarm Clock**.
3. Press ▲/▼ to browse the alarm list and highlight an alarm, then press **OK**.
4. Press ▲/▼ to highlight **Repeat**.
5. Press ◄/► to turn on or off alarm repetition. The tick sign denotes the repetition is activated.
6. Press ▲/▼ to highlight any day, then press ◄/► to set the alarm to repeat on the desired day(s).
7. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.2 Date and Time Settings

The answering system announces the day and time of each message prior to playing it. If you subscribe to calling number display service, the day, month and time are set automatically with each incoming call. However, the year must be correct so that the day of the week can be calculated from the calling number display information. Before using the answering system, set the date and time as follows.

After handset registration or a power failure, the handset will prompt you to set the date and time.

10.2.1 Set the Clock Format

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Clock**, then press **OK**.
3. Press **OK** to select **Clock Format**.
4. Press ◄/► to select the desired time format between **12-Hour** and **24-Hour**.
5. Press ▲/▼ and then ◄/► to select the desired date format between **DD.MM.YYYY** and **MM.DD.YYYY**.
6. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.2.2 Set the Date and Time

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Clock**, then press **OK**.
3. Press ▲/▼ to highlight **Set Time/Date**, then press **OK**.
4. Press the dialling keys to enter the time. You can press ◄/► to move the cursor to different input fields. Then press **OK** to continue.
5. Press the dialling keys to enter the date. You can press ◄/► to move the cursor to different input fields.
6. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

NOTE

If the date and time are not set when a message is recorded, the system announces, “System date and time not set.” before each message plays.

10.2.3 Set the Time/Date Master

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Clock**, then press **OK**.
3. Press ▲/▼ to highlight **Time/Date Master**, then press **OK**.
4. Press ◄/► to select the desired time/date master between **Handset** and **Network**.
5. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.3 Handset Display Settings

10.3.1 Set the Screensaver

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press **OK** to select **Display**.
4. Press ◄/► to preview the screensaver. Then press ◄/► to browse different types of screensaver and select one, including **Analog Clock**, **Digital Clock** and **Slideshow (Wallpaper 1-5)**.

   If you want to turn screensaver off, select **Off**.
5. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

NOTE

If screensaver is set, the selected screensaver appears when the LCD backlight goes to dim mode automatically after 30 seconds in idle state, or you press ⌒ to turn the handset LCD backlight to dim mode manually.

10.3.2 Set the Brightness Level

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press ▲/▼ to highlight **Brightness**, then press ◄/► preview different brightness levels.
4. Press ◄/► to select a appropriate brightness level.
5. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.3.3 Set the LCD Backlight

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press ▲/▼ to highlight **LCD Backlight**, then press ◄/► select **Off**, **On** or **Dim**.
4. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.4 Handset Audio Settings

10.4.1 Set the Ringer Tones

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press ▲/▼ to highlight **Audio**, then press **OK**.
4. Press **OK** to select **Ringer Settings**.
5. Press **OK** to select **Ringer Tones**.
6. Press ▲/▼ to highlight **Home - Ext. Calls**, **Home - Int. Calls**, **Mobile 1** or **Mobile 2**.
7. Press ◄/► to select your desired ringer tone. A sample of each ringer tone plays as you scroll through the choices.
8. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.4.2 Set the Ringer Volume

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press ▲/▼ to highlight **Audio**, then press **OK**.
4. Press **OK** to select **Ringer Settings**.
5. Press ▲/▼ to highlight **Ringer Volume**, then press **OK**.
6. Press ▲/▼ to highlight **Home - Ext. Calls**, **Home - Int. Calls**, **Mobile 1** or **Mobile 2**.
7. Press ◄/► to select your desired ringer volume from **Off**, **Level 1** to **Level 5** and **Crescendo**. A sample of each ringer volume plays as you scroll through the choices.

   If you want to turn off the ringer, select **Off**.
8. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

NOTES

1. "Crescendo" means the ringer volume will be increased gradually from lower to higher.
2. Changing the handset ringer volume does not affect base ringer volume.
3. The ringer volume level also determines the ringer levels of intercom calls.

10.4.3 Set the Silent Mode

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press ▲/▼ to highlight **Audio**, then press **OK**.
4. Press **OK** to select **Ringer Settings**.
5. Press ▲/▼ to highlight **Silent**, then press **OK**.
6. Press ◄/► to select **Off** or **Beep**.
7. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

NOTES

1. If you set **Off**, there will be no tone when you turn off the ringer during an incoming call. While if you set **Beep**, there will be a beep tone instead.
2. In idle mode, you can also turn on/off the silent mode by pressing and holding .

10.4.4 Set the Voice Ringer

To record a voice ringer:

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press ▲/▼ to highlight **Audio**, then press **OK**.
4. Press **OK** to select **Ringer Settings**.
5. Press ▲/▼ to highlight **Voice Ringer**, then press **OK**.
6. Press ▲/▼ to highlight a voice ringer entry, then press **OK**.
7. Press **OK** to select **Record**.
8. Speak towards the handset microphone to record the voice ringer.
9. Press **Save** when you finish recording.

To playback a voice ringer:

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press ▲/▼ to highlight **Audio**, then press **OK**.
4. Press **OK** to select **Ringer Settings**.
5. Press ▲/▼ to highlight **Voice Ringer**, then press **OK**.
6. Press ▲/▼ to highlight a recorded voice ringer entry, then press **OK**.
7. Press ▲/▼ to highlight **Playback**, then press **OK**.
8. The recorded voice ringer will play.
9. Press **Stop** to stop the voice ringer or press **Delete** to delete it while playing.

To delete a voice ringer:

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press ▲/▼ to highlight **Audio**, then press **OK**.
4. Press **OK** to select **Ringer Settings**.
5. Press ▲/▼ to highlight **Voice Ringer**, then press **OK**.
6. Press ▲/▼ to highlight a recorded voice ringer entry, then press **OK**.
7. Press ▲/▼ to highlight **Delete**, then press **OK**.
8. The handset displays **Deleted**. You hear a confirmation tone.

10.4.5 Set the Advisory Tones

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press ▲/▼ to highlight **Audio**, then press **OK**.
4. Press ▲/▼ to highlight **Advisory Tones**, then press **OK**.
5. Press ◄/► to turn on or off **Key Tone**.
6. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

NOTE

The procedure to set the **Confirm Tone**, **Low Battery Tone** and **No Coverage** Tone is the same.

10.4.6 Set the Wideband Sound

With wideband sound turned on, the sound from the handset earpiece or the speaker will be in higher quality, and you can get a better speech experience.

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press ▲/▼ to highlight **Audio**, then press **OK**.
4. Press ▲/▼ to highlight **Wideb. Sound**, then press **OK**.
5. Press ◄/► to select **On** or **Off**.
6. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.4.7 Set the Vibrating Alert

With the vibrating alert on, the handset will vibrate when there is an incoming call.

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press ▲/▼ to highlight **Audio**, then press **OK**.
4. Press ▲/▼ to highlight **Vibrating Alert**, then press **OK**.
5. Press ◄/► to select **On** or **Off**.
6. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.5 Set the Direct Call

To turn on the direct call:

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press ▲/▼ to highlight **Direct Call**, then press **OK**.
4. Press the dialling keys to enter the 4-digit system PIN, then press **OK**. The default PIN is **0000**.
5. Press ◄/► to turn on direct call.
6. Press ▲/▼ to highlight **Number**, then press the dialling keys to enter the
   direct call number.
7. Press **OK** to confirm. You hear a confirmation tone and **Direct Call** displays in the main menu.

   If direct call is turned on and number is set, press any key in main menu will dial the set number except **Option**.

To turn off the direct call from main menu:

1. In main menu, press **Options**.
2. Press the dialling keys to enter the 4-digit system PIN, then press **OK**. The default PIN is **0000**.

3. Press ◄/► to turn off direct call.
4. Press **OK** to confirm. You hear a confirmation tone and the screen returns to main menu.

10.6 Select the Base

Your handset can be registered to a maximum of four bases, and you can select the desired base which you would like to connect from your handset.

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press ▲/▼ to highlight **Select Base**, then press **OK**.
4. Press ◄/► to select a desired base, then press **OK**. The currently used base is displayed with an asterisk.
5. Press **OK**. The handset displays **Searching**.
6. The handset will return to main menu if the registration is successful.

NOTE

Only the registered base(s) is/are displayed in the list.

10.7 Set the Auto Answer Mode

If you turn on the auto answer, you would be able to answer the incoming call simply by picking up the handset from the charging cradle.

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press ▲/▼ to highlight **Auto Answer**, then press **OK**.
4. Press ◄/► to select **On** or **Off**.
5. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.8 Set the Room Monitor

You can set your registered handset(s) as a room monitor. You can save an internal or external number in the handset as the destination number, and then activate the room monitor, the previously saved destination number will be called automatically, as soon as a set noise level is reached. All handset keys will be deactivated, except the two soft keys shown on screen and .

The room monitor call to an external number will be terminated after around 90 seconds, no matter the call is answered or not. While call to an internal number (another handset) will be terminated after around 100 seconds as well if no body answers it. When room monitor call is triggered, press to end the call.

When the room monitor is activated, the keypad will be disabled except the two soft keys, no call can be made on the room monitor handset. Incoming calls to the handset are indicated without ringtone and only shown on the screen. The display will be in dim mode, keypad will not be illuminated and advisory tones will also be turned off. The vibration alert will be disabled. Vibration alert settings will be resumed after room monitor is deactivated.

If you accept an incoming call, the room monitor will be suspended for the call duration, but will be resumed after the call ended.

NOTES

1. You should always check and verify the operation of the room monitor before use, to ensure it is working normally.
2. Enabling this feature will reduce the operating time of the handset considerably. Please place the handset in the base/charging cradle to ensure the battery does not run down.
3. Please put the handset directly towards the baby. But should be 1-2 metres away from the baby.
4. The connection to which the room monitor is diverted must not be blocked by any activated answering machine.

10.8.1 Activate the Room Monitor

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press ▲/▼ to highlight **Room Monitor**, then press **OK**.
4. Press ◄/► to turn on or off room monitor activation.
5. If you select **On**, press ▲/▼ to highlight **Call To** and press ◄/► to select **Internal Call** or **External Call** as the destination.

If you select **Internal Call**:

6. Press ▲/▼ to highlight **Handset** and press ◄/► to select the desired internal handset.
7. Press ▲/▼ to highlight **Sensitivity** and press ◄/► to select the desired sensitivity of room monitor between **Low** and **High**.
8. Press **OK** to save. **Saved** displays and you hear a confirmation tone.

If you select **External Call**:

6. Press ▲/▼ to highlight **Number** and press the dialling keys to enter the external destination number.
7. Press ▲/▼ to highlight **Sensitivity** and press ◄/► to select the desired sensitivity of room monitor between **Low** and **High**.
8. Press **OK** to save. **Saved** displays and you hear a confirmation tone.

NOTE

Higher sensitivity means lower sound can be detected, vice versa.

10.8.2 Deactivate the Room Monitor

In main menu with room monitor activated, press **Off**.

Or

Press **Option** and ◄/► to select **Off**, then press **OK**.

Or

Accept the call from the room monitor handset, then press **8** and **#** continuously.

NOTES

1. To use this option, the room monitor should be diverted to an external destination number, and the destination phone must support tone dialling.
2. With this option to deactivate the room monitor, there will be no further room monitor calls, but the other settings (e.g. no ringtone for incoming call) will remain activated until you turn it off with the other two options above.

10.9 Reset the Handset

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Handset**, then press **OK**.
3. Press ▲/▼ to highlight **Reset Handset**, then press **OK**.
4. Press the dialling keys to enter the 4-digit system PIN, then press **OK**. The default PIN is **0000**.
5. The handset displays **Reset Handset to default?**. Press **Yes** to confirm.
6. The handset will be reset to default settings.

10.10 Base Settings

10.10.1 Ringer Settings

To set the ringer tones:

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Base**, then press **OK**.
3. Press **OK** to select **Ringer**.
4. Press ◄/► to select your desired ringer tone. A sample of each tone plays as you scroll through the choices. (A total of 10 melodies are provided for base ringer.)
5. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

To set the ringer volume:

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Base**, then press **OK**.
3. Press **OK** to select **Ringer**.
4. Press ▲/▼ to highlight **Ringer Volume**.
5. Press ◄/► to select your desired ringer volume from **Off**, **Level 1** to **Level 5**.
6. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.10.2 Set the Flash Time

The default flash time is best suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Base**, then press **OK**.
3. Press ▲/▼ to highlight **Flash Time**, then press **OK**.
4. Press ◄/► to select the desired flash time.
5. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

NOTE

Flash time options are country dependent. Possible options are **80/100/120/180/200/250/300/600ms**.

10.10.3 Set the Dial Mode

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Base**, then press **OK**.
3. Press ▲/▼ to highlight **Dial Mode**, then press **OK**.
4. Press ◄/► to select **Tone** or **Pulse**.
5. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.10.4 Manage the Handsets

To rename the handset:

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Base**, then press **OK**.
3. Press ▲/▼ to highlight **Manage HS**, then press **OK**.
4. All registered handsets are displayed. Press ▲/▼ to highlight a desired handset, then press **OK**.
5. Press **OK** to select **Rename HS**.
6. Press ◄/►, **Clear** and the dialling keys to rename the handset.
7. Press **OK** to save. **Saved** displays and you hear a confirmation tone.

To deregister the handset:

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Base**, then press **OK**.
3. Press ▲/▼ to highlight **Manage HS**, then press **OK**.
4. Press ▲/▼ to highlight a desired handset, then press **OK**.
5. Press ▲/▼ to highlight **Deregister HS**, then press **OK**.
6. Press the dialling keys to enter the 4-digit system PIN, then press **OK**. The default PIN is **0000**.
7. The handset displays **De-register?**. Press **Yes** to confirm.
8. When the deregistration is successful, the handset displays **Deleted** and returns to main menu.

NOTE

The handset you are using cannot deregister itself.

To set the call interception:

With call interception turned on, when a caller is leaving a message on your answering system, you can stop recording and talk to the caller by pressing or on the handset.

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Base**, then press **OK**.
3. Press ▲/▼ to highlight **Manage HS**, then press **OK**.
4. Press ▲/▼ to highlight a desired handset, then press **OK**.
5. Press ▲/▼ to highlight **Call Interception**, then press **OK**.
6. Press ◄/► to turn call interception on or off.
7. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.10.5 Change the System PIN

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Base**, then press **OK**.
3. Press ▲/▼ to highlight **Change PIN**, then press **OK**.
4. Press the dialling keys to enter the old 4-digit PIN. The default PIN is **0000**.
5. Press the dialling keys to enter the new 4-digit PIN.
6. Press the dialling keys to reconfirm and save the new PIN.
7. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.10.6 Reset the Base

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Base**, then press **OK**.
3. Press ▲/▼ to highlight **Reset Base**, then press **OK**.
4. Press the dialling keys to enter the 4-digit system PIN, then press **OK**. The default PIN is **0000**.
5. The handset displays **Reset Base to default?**. Press **Yes** to confirm.
6. The base will be reset to default settings and will then return to standby.

10.10.7 Set the Manual ECO Mode

With Manual ECO set at lower level, the radiation between the base and handset will be lower, as well as the range of the base.

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Base**, then press **OK**.
3. Press ▲/▼ to highlight **Manual ECO**, then press **OK**.
4. Press ◄/► to select the desired manual ECO level from **Level 1** to **Level 4**.
5. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

NOTE

Level 1 Indicates lower radiation and shorter range.

10.10.8 Set the Enhanced ECO Mode

With Enhanced ECO mode turned on, the radiation (DECT transmission power) between the base and handset will be switched off automatically and only turns on when calls are made.

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Base**, then press **OK**.
3. Press ▲/▼ to highlight **Enhanced ECO**, then press **OK**.
4. Press ◄/► to turn enhanced ECO mode on or off.
5. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

NOTE

When the Enhanced ECO mode is activated, call setup will be delayed by around 2 seconds and the handset standby time will be reduced as well.

10.10.9 Set the Handset Ringer Priority

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Base**, then press **OK**.
3. Press ▲/▼ to highlight **Ringer Priority**, then press **OK**.
4. Press ◄/► to select **All**, **Handset 1** or **Handset 2**.

If you select **All**:

5. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

If you select **Handset 1** or **Handset 2**:

5. Press ▲/▼ to highlight **Rings**, then select the ring delay from **2 Rings**, **4 Rings**, **6 Rings** and **8 Rings**.
6. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.10.10 Set the Call Share

Call share allows two handsets to share the same external call conveniently, instead of setting up a conference call by complicated call transfer. Please refer to page 90 for operation details.

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Base**, then press **OK**.
3. Press ▲/▼ to highlight **Call Share**, then press **OK**.
4. Press ◄/► to select **On** or **Off**.
5. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

10.10.11 Set the Exchange Code

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Base**, then press **OK**.
3. Press ▲/▼ to highlight **Exchange Code**, then press **OK**.
4. Press the dialling keys to enter the exchange code.
5. Press **OK** to confirm. **Saved** displays and you hear a confirmation tone.

NOTE

Only one digit can be entered for the exchange code and it can be null.

10.11 Register a Handset to a Base

You can register up to five handsets to a telephone base.

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Registration**, then press **OK**.
3. Press ◄/► to select a desired base, then press **OK**. The currently used base,
   if any, is displayed with an asterisk.
4. Press the dialling keys to enter the 4-digit system PIN, then press **OK**. The default PIN is **0000**.
5. The handset displays **Press and Hold Page Button!**
6. Press and hold on the telephone base, the handset displays **Registering...**
7. The handset will return to main menu if the registration is successful. An unused handset number will be assigned automatically.

11. ANSWERING MACHINE

The total recording time for the outgoing message, messages and memos is approximately 60 minutes with HQ (low compression) or 30 minutes with SHQ.
The messages remain available for replay until you delete them.

You can operate your answering machine from the handset, the base, or via remote access.

11.1 Message Playback

You can play the TAM messages no matter the answer machine is on or off. If you have both new and old messages, the telephone will play the new ones first.

When playback begins, the handset and telephone base screens display the message status, caller's information (if the number of the caller is stored in the contacts), and time and date of the message recorded. You hear the total number of messages followed by the day and time of the message. After the last message, the telephone announces, "End of messages." and the handset displays **End of Messages**.

To listen to messages with a handset:

1. In main menu, press **TAM**.
2. Press **OK** to select **Play Messages**.
3. If you have either new or old messages, the messages will play automatically.

Options during playback:

Press 🔈 to play the messages through the handset earpiece. Press 🔈 again to return to playing messages through the speakerphone.

Press ▲/▼ to adjust the speakerphone volume.

Press **2** or **Stop** to stop the message playback and go back to previous screen.

Press **4** once to repeat playing the current message from the

beginning. Press twice to skip backward to play the previous message.

Press **5** or **Delete** to delete the current message. The handset displays **Deleted** briefly and the system advances to the next message.

Press **6** to skip forward to play the next message.

Press ⌒ to stop the current message playback and return to main menu.

NOTES

1. At the end of playback the handset display will return to main menu.
2. If there are no TAM messages, **No Messages!** will display on the handset and the handset will return to the previous screen.

To listen to messages with the telephone base:

Press ►/■. New messages will be played first.

Options during playback:

Press **DEL** to delete the voice message during playback. The system advances to the next message.

Press ►/■ to stop or resume the message playback.

Press ⏮ once to repeat playing the current message from the beginning. Press twice to skip backward to play the previous message.

Press ⏭ to skip to the next message.

Press 🔊+ / 🔊− to increase or decrease the speaker volume during message playback.

11.2 Delete All Old Messages

Using a handset:

1. In main menu, press **TAM**.
2. Press ▲/▼ to highlight **Del All Old Msg**, then press **OK**.

3. The screen displays **Delete All Old Messages?**. Press **Yes** to confirm.
4. The handset displays **Deleted** and the telephone announces, “All old messages deleted.”

Using the telephone base:

Press and hold **DEL** when the phone is not in use. All previously reviewed messages are erased and the telephone announces, “All old messages deleted.”

NOTE

You can only delete the old messages which have been previously reviewed.

11.3 Answer On/Off

If you turn the answering system on, it answers calls and records messages only on the home line. If your paired mobile phone has voicemail, callers can leave messages with the voicemail service.

When the answering system is turned on, displays on the handset status bar.

Using a handset:

1. In main menu, press **TAM**.
2. Press ▲/▼ to highlight **Answer On/Off**, then press **OK**.
3. Press ◄/► to select **On** or **Off**.
4. Press **Yes** to confirm.
5. TAM will be turned on or off and you hear a confirmation tone.

Using the telephone base:

Press to turn the answering system on or off when the phone is not in use. When the answering system is turned on, it announces, “Answer on.” When the answering system is turned off, it announces, “Answer off.”

NOTES

1. If there is no remaining recording time, the answering system announces “Calls will not be answered.” and cannot be turned on.
2. If TAM is off, will be disappeared on the handset status bar.

11.4 Record and Play Memos

Memos are messages you record as reminders for yourself or others using the same answering system. You can record your own memos using a system handset. Play and delete them the same way as incoming messages.

To record and play a memo:

1. In main menu, press **TAM**.
2. Press ▲/▼ to highlight **Record Memo**, then press **OK**.
3. The system announces, “Please speak after the tone. To end recording, press SAVE.” After the tone, speak towards the handset microphone.
4. Press **Save** when you finish recording. The saved memo will be played back automatically.
5. Press **Stop** to stop playing or press **Delete** to delete the memo.

NOTE

Newly recorded memo is also treated as a new TAM message.

11.5 CareMemo

You can record CareMemos that will be played automatically through the base speaker when the set time reaches.

11.5.1 Play a CareMemo

1. In main menu, press **TAM**.
2. Press ▲/▼ to highlight **CareMemo**, then press **OK**.
3. Press **OK** to select **CareMemo 1** or **CareMemo 2**.
4. Press **OK** to select **Playback**.
5. Press **OK** to play the desired memo.

NOTE

If no memo recorded before, the handset will display "**No Messages!**".

11.5.2 Record a CareMemo

1. In main menu, press **TAM**.
2. Press ▲/▼ to highlight **CareMemo**, then press **OK**.
3. Press **OK** to select **CareMemo 1** or **CareMemo 2**.
4. Press **OK** to select **Record**.
5. The system announces, "Please record your CareMemo message after the tone. Press SAVE to stop recording." After the tone, speak towards the handset microphone.

NOTE

If there is already a memo recorded before, the handset will display "Replace?". Press **YES** to record the new memo.

6. Press **SAVE** to save and the recorded memo will play automatically.

11.5.3 Turn the CareMemo ON/OFF

1. In main menu, press **TAM**.
2. Press ▲/▼ to highlight **CareMemo**, then press **OK**.
3. Press **OK** to select **CareMemo 1** or **CareMemo 2**.
4. Press **OK** to select **On/Off**.
5. Press **OK** to select **Daily**, **Once** or **Off**.
   - If you selected **Daily** or **Once**, press ▼ and then enter the time to set the alert time.
6. Press **OK** to confirm.

NOTE

If you selected **OFF**, and if there is a memo preset by user, the date/ time
setting will be removed, but the recorded memo will be kept. You can turn it on for next use.

11.6 Outgoing Message

An outgoing message is the greeting callers hear when calls are answered by the answering system. There are two pre-recorded outgoing messages, one for **Answer & Record** mode and the other for **Answer Only** mode. You can also record your own outgoing message.

The telephone is preset with a greeting that answers calls with “Hello, please leave a message after the tone.” You can use this default outgoing message, or replace it with your own.

11.6.1 Play Outgoing Message

1. In main menu, press **TAM**.
2. Press ▲/▼ to highlight **Outgoing Msg**, then press **OK**.
3. Press **OK** to select **Play OGM**.
4. Press ◄/► to select **Ans & Rec** or **Ans Only**.
5. If you have recorded your own outgoing message, it will be played; otherwise, the pre-recorded one will be played.
6. Press **Stop** to stop the message playback.

11.6.2 Record Your Own Outgoing Message

1. In main menu, press **TAM**.
2. Press ▲/▼ to highlight **Outgoing Msg**, then press **OK**.
3. Press ▲/▼ to highlight **Record OGM**, then press **OK**.
4. Press ◄/► to select **Ans & Rec** or **Ans Only**.
5. The system announces, “Please speak after the tone. To end recording, press SAVE.” After the tone, speak towards the handset microphone.
6. Press **Save** when you finish recording. The newly recorded outgoing message will be played back automatically.
7. Press **Stop** to stop playing or press **Delete** to delete the outgoing message. After deleting the message, the handset displays **Deleted** and the pre-recorded outgoing message will be played.

NOTES

1. Your outgoing message can be up to 90 seconds in length.
2. Outgoing messages shorter than three seconds are not recorded.

11.6.3 Delete your Outgoing Message

1. In main menu, press **TAM**.
2. Press ▲/▼ to highlight **Outgoing Msg**, then press **OK**.
3. Press **OK** to select **Play OGM**.
4. Press ◄/► to select **Ans & Rec** or **Ans Only**.
5. If you have recorded your own outgoing message, it will be played.
6. Press **Delete** to delete your own recorded outgoing message.
7. After deleting the message, the handset displays **Deleted** and the pre-recorded outgoing message will be played.

NOTE

The pre-recorded message cannot be deleted.

11.7 TAM Settings

In the answering system setup menu, you can change the settings for answer mode, answer delay, recording time and call screening.

11.7.1 Set the Answer Mode

1. In main menu, press **TAM**.
2. Press ▲/▼ to highlight **TAM Settings**, then press **OK**.
3. Press ◄/► to select **Ans & Rec** or **Ans Only** as the desired answer mode.
4. Press **OK** to confirm.
5. The handset displays **Saved** and you hear a confirmation tone.

11.7.2 Set the Answer Delay

1. In main menu, press **TAM**.
2. Press ▲/▼ to highlight **TAM Settings**, then press **OK**.
3. Press ▲/▼ to highlight **Answer Delay**.
4. Press ◄/► to select from **Time Saver**, **2 Rings**, **3 Rings**, **4 Rings**, **5 Rings**, **6 Rings**, **7 Rings**, **8 Rings**, and **9 Rings**.
5. Press **OK** to confirm.
6. The handset displays **Saved** and you hear a confirmation tone.

11.7.3 Set the Recording Time

1. In main menu, press **TAM**.
2. Press ▲/▼ to highlight **TAM Settings**, then press **OK**.
3. Press ▲/▼ to highlight **Recording Time**.
4. Press ◄/► to select the recording time from **30 seconds**, **60 seconds**, **120 seconds** and **Unlimited**.
5. Press **OK** to confirm.
6. The handset displays **Saved** and you hear a confirmation tone.

11.7.4 Enable/Disable Call Screening

1. In main menu, press **TAM**.
2. Press ▲/▼ to highlight **TAM Settings**, then press **OK**.
3. Press ▲/▼ to highlight **Call Screening**.
4. Press ◄/► to select **On** or **Off**.
5. Press **OK** to confirm.
6. The handset displays **Saved** and you hear a confirmation tone.

11.8 Call Screening

The call screening feature lets you listen at the telephone base and handset to a caller leaving a message. While monitoring an incoming message, you can answer the call by pressing or on the handset.

To screen calls at the handset:

If TAM and call screening are on and the answering system is recording a message, press **Screen** to screen the call and **Scanning in progress...** displays.

Keys	Functions	
	While message is not playing	**While message is playing**
1	Press to play remote access menu.	
2	Press to play the message(s).	
4		Press to repeat playing the current message from the beginning. Press twice to skip backward to play the previous message.
5		Press to delete the current message playback.
6		Press to skip forward to play the next message
7	Press to turn TAM on.	
9	Press to turn TAM off.	
*****	Press and enter the remote access PIN if the answering machine is on and during OGM is playing.	

At any time if you want to pick up the call, you can press on the handset and the message recording will be stopped automatically. If the answering machine is in the process of recording, the message already stored will be saved.

To screen calls at the telephone base:

If the answering system and call screening are on, the outgoing message and the incoming message broadcast at the telephone base when a call is answered by the answering system.

Options while a message is being recorded:

Press 🔊+ / 🔊− on the telephone base to adjust the call screening volume.

Press ►/■ to stop the message recording.

11.9 Remote Access

You can operate your answering machine from any phone by calling your phone and entering a 4-digit security code. The preset code is **0000**. You can change the code to any 4-digit number.

11.9.1 Enable/Disable Remote Access

To enable or disable remote access:

1. In main menu, press **TAM**.
2. Press ▲/▼ to highlight **Remote Access**, then press **OK**.
3. Press ◄/► to select **On** or **Off**, then press **OK**.
4. If you select **On**, enter the old PIN, then press **OK**. The default PIN is **0000**.
5. Enter the new PIN and press **OK**, then enter the new PIN again.
6. Press **OK** to confirm.
7. The handset displays **Saved** and you hear a confirmation tone.

NOTES

1. If the old PIN or the repeat PIN entered is incorrect, **Incorrect PIN!** will display on the screen.
2. If you select **Off** for remote access, the PIN previously stored will be removed. A new PIN will be needed to be entered to enable remote access.

11.9.2 Operate Your Answering Machine Remotely

1. Dial your phone number from another phone.

2. Press ✱ when you hear the outgoing message and then enter the 4-digit remote access PIN.
3. When you have accessed your phone, you can use the keypad to operate your answering machine (see the **Remote Commands** table below). Follow the announcements and instructions you hear.

NOTES

1. If you enter the incorrect PIN code for three times, your phone system will hang up.
2. If you do not press any keys after you entered the remote access code, all new messages play. If there are no new messages, all old messages play.
3. Once the new messages have played, the telephone announces the help menu options. If you do not press any key within 20 seconds, the remote access call automatically disconnects.

11.9.3 Activate Remote Access if TAM is Off

1. Dial your number from another phone and let it ring.
2. After 10 rings, the answering machine will switch on and answer your call.
3. Press ✱ and then enter your remote access PIN.
4. When you have accessed your phone, you can use the keypad to operate your answering machine (refer to the table in **Operate Your Answering Machine Remotely**). Follow the announcements and instructions you hear.

NOTE

If you do not choose to turn TAM **On**, it will turn off when the call ends.

11.10 Answering System and Voicemail

Your telephone has separate indicators for two different types of voice messages: those recorded on its built-in answering system and those recorded in your service provider's voicemail (fees may apply). Your telephone's built-in answering system messages and voicemail messages are separate. Each alerts you to new messages differently.

If there is a blue circle appearing at the top right corner of TAM in the main menu of the handsets and a number is flashing on the telephone base, there is/are new message(s) in the built-in answering system. To listen to messages recorded on your digital answering system, press ►/■ on the telephone base.

If ∞ displays on handsets, your telephone service provider is indicating that it has new voicemail for you. To listen to your voicemail, you typically dial an access number provided by your telephone service provider, followed by a security code or PIN.

Some service providers bundle or combine multiple services like voicemail and call waiting, so you may not be aware that you have voicemail. To check what services you have and how to access them, contact your telephone service provider.

To use your voicemail service rather than your answering system, turn off your answering system. To use your answering system rather than your voicemail service, contact your telephone service provider to deactivate your voicemail service.

11.10.1 Using the Answering System and Voicemail Together

You can also use your telephone answering system and voicemail together by setting your built-in answering system to answer before voicemail answers as described below. To learn how to program your voicemail settings, contact your telephone service provider. Then, if you are on a call, or if the answering system is busy recording a message and you receive another call, the second caller can leave a voicemail message.

Set your answering system to answer calls at least two rings earlier than your voicemail is set to answer. For example, if your voicemail answers after six rings, set your answering system to answer after four rings. Some voicemail providers may program the delay before answering calls in seconds instead of rings. In this case, allow six seconds per ring when determining the appropriate setting.

11.10.2 Voice Prompts

The system provides voice prompts to guide you through the setup procedures at the telephone base, message playback, remote access and recording outgoing messages.

12. ADDITIONAL HANDSETS

12.1 Transfer a Call

While on an outside call, you can transfer the call from one handset to another.

1. Press **Intern**. It will call the other handset.
2. The external call is put on hold automatically and the called handset rings.
3. Press **Transf** on the calling handset.
4. The current call with the external party ends on the calling handset and the called handset rings.
5. Press **Answer**, or on the called handset to answer the call. The external call is now transferred to the called handset.

NOTE

If the destination device does not answer within 30 seconds, the caller device displays **No response to transfer** and rings. If the caller device does not answer the call on hold within 30 seconds, the call will end automatically.

12.2 Intercom

Use the intercom feature for conversations between two handsets

You can buy additional expansion handsets for this telephone system. You can register up to five handsets to the telephone base.

12.2.1 Initiate an Intercom Call

In main menu, press the one-digit destination handset number in the keypad, then press **Intern**. The destination handset rings.

12.2.2 Answer an Intercom Call at the Destination Device

Press **Answer**, or on the destination handset.

12.2.3 Silence an Intercom Call

Press **Silent** on the destination handset and **Ringer mute** appears.

12.2.4 Mute while on an Intercom Call

Press ◄ to mute the microphone and call muted icon will be displayed on screen. Your caller cannot hear you.

Press ◄ again to unmute the microphone and call muted icon disappears.

12.2.5 End an Intercom Call

Press ⌒ to end the intercom call.

OR

Put the handset on the telephone base or charger.

NOTE

If you are calling all devices, only the first handset to pick up can answer the intercom call. If the destination device does not answer the intercom call within 100 seconds, is in the contact list or call log, or is out of range, the initiating device displays **Not possible**.

12.3 Answer an Incoming Call during an Intercom Call

When you receive an incoming home call during an intercom call, the two handsets display **External Call** and then the calling number display. The telephone base and all other handsets ring.

12.3.1 Answer a Home Call during an Intercom Call

Press **Option** and then **OK** to select **CW Accept** to answer the home call. The intercom call will be put on hold automatically.

During the home call, you have the following options:

- If you want to resume the intercom call, press **Brok**. The home call will be put on hold automatically.
- If you want to establish a 3-way conference call, press **Conf**. The other handset will join the call. For details on conference call, refer to page 89.

Press ⌒ to end the intercom call without answering the incoming call. The telephone continues to ring.

12.3.2 Answer a Mobile Call during an Intercom Call

When you receive an incoming mobile call during an intercom call, the two handsets display the mobile device name and then the calling number display. The telephone base rings and all other handsets ring.

Press **Option** and then **OK** to select **CW Accept** to answer the mobile call.
The intercom call will be put on hold automatically.

During the mobile call, you have the following options:

- If you want to resume the intercom call, press **Brok**. The mobile call will be put on hold automatically.
- If you want to establish a 3-way conference call, press **Conf**. The other handset will join the call. For details on conference call, refer to the next section.

Press ⌒ to end the intercom call without answering the incoming call. The telephone continues to ring.

12.4 Conference Call

12.4.1 Make a 3-Way Conference Call

The conference call feature allows one external call to be shared with two handsets (in intercom). The three parties can share the conversation and no network subscription is required.

During an external call with internal call put on hold:

1. Press **Brok** to toggle between the external and internal call.
2. Press **Conf** to establish a 3-way conference.
3. From the conference call, you have the following options

   • Press **Single** to talk to the external call and put the internal call on hold. Then press **Brok** to toggle the line between external and internal call. When user talks to the internal or external call, another line will be put on hold automatically. If you want to re-establish the 3-way conference call, press **Conf**.

   • Press **End** or ⌒ on any handset during a conference call will leave the other handset still in connection with the external call.

12.4.2 Make a 3-Way Conference Call with Call Share

If you turn on the call share function (see page 73 for details on setting call share), you can conduct a conference call between handsets easily as following.

During an external call:

Press or on the handset to establish the conference call if another handset has answered the call.

NOTE

Any party hangs up during a conference call will leave the other party still in connection with the external call.

12.4.3 Make a Conference Call between Two Ext. Lines and One Handset

During an external call:

1. Press , and then enter the external number. Or press **Option** and ▲/▼ to select an entry from the Contacts or Call Log.
2. Press **OK** to call the external number and the first external call will be on hold automatically.
3. Press **Brok** to toggle the line between two external lines.
4. Press **Conf** to establish a conference call.
5. Press to end the call and back to main menu.

NOTE

This feature requires network subscription.

12.5 Register Handsets

Your handset and telephone base is pre-registered. If for some reason, the handset is not registered to the telephone base, **Register!** will be displayed on the handset screen, register your handset according to the following procedure.

12.5.1 Automatic Registration for Handset

1. Make sure the handset battery is fully charged before you begin registration.

2. Put the handset you wish to register on the telephone base cradle, not the charger, when it shows **Register!**
3. Registration is automatically performed by the system. The handset displays **Registering...**
4. When the registration is complete, the handset displays **Registered**, and you hear a confirmation tone.

12.5.2 Register a Handset through the Menu

1. In main menu, press **Reg.**.
2. Press ◄/► to select a desired base, then press **OK**.
3. Press the dialling keys to enter the 4-digit system PIN, then press **OK**. The default PIN is **0000**.
4. The handset displays **Press and Hold Page Button!**
5. Press and hold on the telephone base, the handset will display **Registering...**
6. The handset will return to main menu if the registration is successful.

   If registration fails, please try again from step 1 or follow the automatic registration procedure as above.

OR

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Registration**, then press **OK**.
3. Press ◄/► to select a desired base, then press **OK**.
4. Press the dialling keys to enter the 4-digit system PIN, then press **OK**. The default PIN is **0000**.
5. The handset displays **Press and Hold Page Button!**
6. Press and hold on the telephone base, the handset will display **Registering...**
7. The handset will return to main menu if the registration is successful.

   If registration fails, please try again from step 1 or follow the automatic registration procedure as above.

NOTES

1. Additional handsets are assigned numbers in the sequential order they are registered.

2. You cannot register a handset if any other system handset is in use.

12.6 Deregister Handsets

If you want to replace a handset or reassign the designated handset number of a registered handset, you must deregister all the handsets and then individually register each handset again.

To deregister a single handset:

1. In main menu, press **Settings**.
2. Press ▲/▼ to highlight **Base**, then press **OK**.
3. Press ▲/▼ to highlight **Manage HS**, then press **OK**.
4. Press ▲/▼ to highlight a desired handset, then press **OK**.
5. Press ▲/▼ to highlight **Deregister HS**, then press **OK**.
6. Press the dialling keys to enter the 4-digit system PIN, then press **OK**. The default PIN is **0000**.
7. The handset displays **De-register?**. Press **Yes** to confirm.
8. When the deregistration is successful, the handset displays **Deregistered** and returns to main menu.

NOTE

The handset you are using cannot deregister itself.

To deregister all handsets:

1. Make sure that all handsets are out of the telephone base and chargers before you begin deregistration.
2. Unplug the telephone base power adapter from the power outlet. Make sure all handsets are plugged with charged batteries before proceeding.
3. While you press and hold on the telephone base, plug the telephone base power adapter back to the power outlet.
4. Keep pressing and holding for about 10 seconds, then release it.
5. The base enters deregistration mode and all handsets display **Register!**

13. TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestion listed below.

Problem	Solutions
My telephone does not work at all.	• Make sure the batteries are installed and charged correctly. For optimum daily performance, return the handset to the telephone base after use. • Make sure the power adapter is securely plugged into an outlet. • Make sure the telephone line cord is plugged firmly into the telephone base and the telephone wall jack. • Unplug the electrical power to the telephone base. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the handset and telephone base to synchronize. • Remove and re-insert the batteries. If that still does not work, it might be necessary to purchase new batteries. • Disconnect the telephone base from the telephone wall jack and plug in a working telephone. If the other telephone does not work, the problem is probably in the wiring or the telephone service. Call your telephone service provider.
Low battery shows on screen.	• Place the handset in the telephone base for recharging. • Remove and re-install the batteries and use it until fully depleted, then recharge the handset in the telephone base. • If the above measures do not solve the problem, replace the batteries.

The batteries do not charge in the handset or the handset batteries do not accept charge.	• Make sure the handset is placed in the telephone base correctly. • Remove and reinstall the batteries, then change the handset for about 10 hours. • Purchase new batteries.

There is interference during a telephone conversation. My calls fade out when I am using the handset.	• The location of your telephone base can impact the performance of your cordless phone. For better reception, install the telephone base in a centralized location within your home or office, away from walls or other obstructions. In many environments, elevating the telephone base improves overall performance. • Disconnect the telephone base from the telephone wall jack and plug in a corded telephone. If calls are still not clear, the problem is probably in the wiring or telephone service. Contact your telephone service provider (charges might apply). • If the other telephones in your home are having the same problem, the problem is in the wiring or telephone service. Contact your telephone service provider (charges may apply).
Common cure for electronic equipment.	If the telephone is not responding normally, put the handset in the telephone base. If it does not respond, try the following (in the order listed): • Disconnect the power to the telephone base. • Disconnect the batteries on the handset. • Wait a few minutes before connecting power to the telephone base. • Re-install the batteries and place the handset in the telephone base. • Wait for the handset to synchronize with the telephone base. Allow up to one minute for this to take place.

Please contact the technical support of the network provider for further information. This telephone is not equipped with a grounding function! Therefore some of the functions may be limited when used in PBX systems.

Technical Support

For technical support, please call VTech Technical Inquiry Hotline 852-2667 7433. Please read out the serial number of this telephone to Technical Center. The serial number can be found in the battery compartment after having the batteries removed.

14. TECHNICAL SPECIFICATIONS

BASIC INFORMATION	
Dimensions	Handset: width / length / height = 50 X 160 X 18 mm Base: width / length / height = 85 X 140 X 70 mm Charger: width / length / height = 79 X 85 X 68 mm
Weight	Handset: 117g (without battery); 140g (with battery) Base: 186g Charger: 63g
Valid range	Indoor: 50m Outdoor: 300m
Handset Operating Time	Standby time: 200Hours approx. Talk time: 20Hours approx.
RF Parameter	
Frequency	1.8GHz
Number of Channels	10 channels
Power Supply	
Base	Input AC 100-240V 50/60Hz 150mA Output 6VDC 750mA SMPS
Handset	Li-ion; 3.7V; 1000mAH rechargeable batteries pack.
Charger	Input AC 100-240V 50/60Hz 150mA Output 6VDC 450mA SMPS

15. CARE AND MAINTENANCE INSTRUCTIONS

Take care of your telephone

- Your cordless telephone contains sophisticated electronic parts, so you must treat it with care.
- Avoid rough treatment.
- Place the handset down gently.
- Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

- You can damage your telephone if it gets wet. Do not use the handset in the rain, or handle it with the wet hands. Do not install the telephone base near a sink, bathtub or shower.

Electrical storms

- Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electric appliances during storms.

Cleaning your telephone

- Your telephone has a durable plastic casing that should retain its luster for many year. Clean it only with a soft cloth slightly dampened with water or a mild soap.
- Do not use excess water or cleaning solvents of any kind.

NOTE

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone base should fall into water. DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL. Then pull the unit out by the unplugged cords.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Customer Service Centre

Suite 1601, Lever Tech Centre, 69-71 King Yip Street,
Kwun Tong, Kowloon, Hong Kong.

Customer Service Hotline: (852) 2666 5558
Technical Inquiry Hotline: (852) 2667 7433

VTECH TELECOMMUNICATIONS LTD.
A member of THE VTECH GROUP OF COMPANIES.
© 2014 VTech Telecommunications Ltd. All Rights Reserved.

91-007573-010-100

vtech®